


# Tchibo

## LED-Fußball

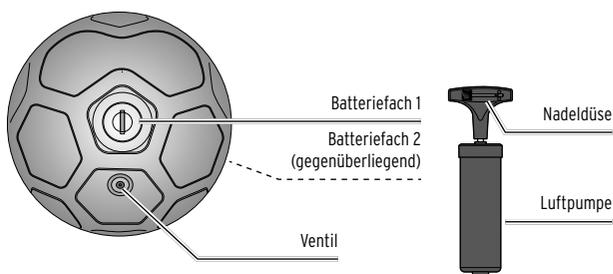

de Bedienungsanleitung

Tchibo GmbH D-22290 Hamburg · 121002AB2X2XII · 2021-12

**Liebe Kundin, lieber Kunde!**  
In Ihrem neuen LED-Fußball leuchten beim Werfen und Kicken 2 gegenüberliegende LEDs. Nach ca. 30 Sekunden ohne Erschütterung schalten sich die LEDs automatisch aus.

Wir wünschen Ihnen viel Freude damit.

Ihr Tchibo Team



Artikelnummer: 629 385

### Sicherheitshinweise

Lesen Sie aufmerksam die Sicherheitshinweise und benutzen Sie den Artikel nur wie in dieser Anleitung beschrieben, damit es nicht versehentlich zu Verletzungen oder Schäden kommt. Bewahren Sie diese Anleitung zum späteren Nachlesen auf. Bei Weitergabe des Artikels ist auch diese Anleitung mitzugeben.

#### Verwendungszweck

Der LED-Fußball ist ein Spielgerät für den häuslichen Bereich und nicht als Sportgerät vorgesehen. Für den gewerblichen Einsatz in Fitness-Studios, beim Ballsport und zu therapeutischen Zwecken ist er nicht geeignet.

Der LED-Fußball ist belastbar bis max. 20 kg. Er darf nur wie in dieser Anleitung beschrieben verwendet werden. Setzen Sie sich nicht darauf.

#### ACHTUNG:

- Nicht für Kinder unter 36 Monaten geeignet. Kleine Teile. Erstickungsgefahr.
- Halten Sie Kinder auch von Verpackungsmaterial fern.

#### WARNUNG - Verletzungsrisiken und Sachschäden durch Batterien/Akkus

• Nehmen Sie den Artikel nicht auseinander. Nehmen Sie keine Veränderungen am Artikel vor. Durch unsachgemäße Reparaturen können erhebliche Gefahren für den Benutzer entstehen. Lassen Sie Reparaturen am Artikel nur in einer Fachwerkstatt durchführen.

• **ACHTUNG.** Entsorgen Sie verbrauchte Batterien umgehend. Batterien können bei Verschlucken lebensgefährlich sein. Der Artikel ist mit Knopfzellen ausgestattet. Wenn eine Knopfzelle verschluckt wird, kann dies innerhalb von nur 2 Stunden zu schweren inneren Verätzungen und zum Tode führen. Halten Sie sowohl neue als auch verbrauchte Batterien von Kindern fern. Wenn das Batteriefach nicht korrekt schließt, verwenden Sie den Artikel nicht weiter und halten Sie ihn von Kindern fern.

Wenn Sie vermuten, eine Batterie könnte verschluckt oder anderweitig in den Körper gelangt sein, nehmen Sie sofort medizinische Hilfe in Anspruch.

• Batterien/Akkus dürfen ausschließlich von Erwachsenen eingelegt oder ausgetauscht werden. Wenn Sie Akkus (wiederaufladbare Batterien) verwenden, dürfen diese nur unter Aufsicht eines Erwachsenen und in einem geeigneten Ladegerät geladen werden. Akkus müssen zum Laden aus dem Artikel genommen werden.


• Achten Sie beim Einsetzen der Batterien/Akkus auf die Polarität (+/-). Verwenden Sie nur denselben oder einen gleichwertigen Batterietyp (siehe „Technische Daten“).

• Batterien dürfen nicht geladen, Batterien/Akkus nicht auseinandergenommen, in Feuer geworfen oder kurzgeschlossen werden.

- Nehmen Sie die Batterien/Akkus heraus, wenn diese verbraucht sind. So vermeiden Sie Schäden, die durch Auslaufen entstehen können.
- Ersetzen Sie immer alle Batterien/Akkus. Mischen Sie keine alten und neuen Batterien/Akkus, verschiedene Batterie/Akku-Typen, -Marken oder welche mit unterschiedlicher Kapazität.
- Sollte eine Batterie/ein Akku ausgelaufen sein, vermeiden Sie Kontakt mit Haut, Augen und Schleimhäuten. Spülen Sie ggf. die betroffenen Stellen mit Wasser und suchen Sie umgehend einen Arzt auf.

#### WARNUNG - Verletzungsrisiken und Sachschäden beim Aufpumpen des Balls

- Pusten Sie den Ball nicht mit dem Mund auf. Gefahr von Schwindel.
- Pumpen Sie den Ball nicht über seine Nenngröße von 22 cm hinaus auf. Der Ball darf nicht völlig stramm aufgepumpt sein, sondern muss sich noch leicht mit dem Daumen eindrücken lassen.

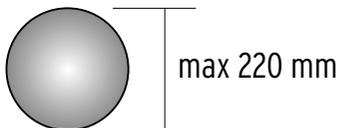


- Nicht in kaltem Zustand aufpumpen. Lassen Sie ihn mindestens eine Stunde bei Raumtemperatur liegen. Das Material braucht diese Zeit, um die volle Dehnfähigkeit zu erlangen.
- Benutzen Sie keine Drucklufteinrichtungen an Tankstellen, um den Ball aufzupumpen. Der Ball könnte zu stark aufgepumpt werden oder bersten.
- Als Füllmedium darf nur Luft verwendet werden.


#### VORSICHT - Sachschäden

- Aufgrund ihrer extrem langen Lebensdauer ist ein Wechseln der Leuchtdioden nicht nötig. Sie können nicht beschädigungsfrei gewechselt werden.
- Schützen Sie den Artikel vor Tropf- und Spritzwasser. Setzen Sie ihn keinem Regen aus. Tauchen Sie ihn nicht in Wasser.
- Halten Sie harte, schwere, spitze oder scharfkantige Gegenstände sowie offene Flammen fern vom Artikel. Schützen Sie den Artikel vor direkter Sonneneinstrahlung und extremen Temperaturen und Temperaturschwankungen.

### LED-Fußball aufpumpen

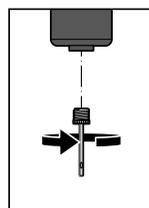

1. Schrauben Sie die Nadeldüse auf die Luftpumpe. Feuchten Sie die Nadel vor dem Aufpumpen mit mildem Seifenwasser an, damit das Ventil nicht beschädigt wird.

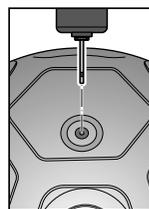

2. Stecken Sie die Nadeldüse in das Ventil des Balls. Stecken Sie sie soweit hinein, bis der Nadelkopf vollständig auf der Balloberfläche aufliegt. Wenn der Ball noch sehr platt ist, halten Sie die Pumpe ggf. etwas schräg, um ganz einzudringen.



Das vollständige Einstecken der Nadeldüse ist insbesondere beim ersten Aufpumpen wichtig, da die Ventilmembrane durchstoßen werden muss. Lässt sich der Ball nicht leichtgängig aufpumpen, ist die Membrane nicht durchstoßen. In dem Fall ziehen Sie die Nadeldüse heraus und stecken Sie sie erneut bis zum Anschlag in das Ventil.

3. Pumpen Sie den Ball langsam und stetig auf, bis er den gewünschten Härtegrad erreicht hat. Den Ball nur bis zu einem maximalen Durchmesser von 22 cm aufpumpen, da er sonst Schaden nehmen kann.




Das Ventil schließt luftdicht ab, sobald Sie die Luftpumpe herausziehen.


▷ Bewahren Sie die Nadeldüse im Griff der Luftpumpe auf.

#### Batterien einlegen / wechseln


Bei Anlieferung sind die Batterien bereits eingelegt. Ziehen Sie den Isolierstreifen aus dem Batteriefach heraus.

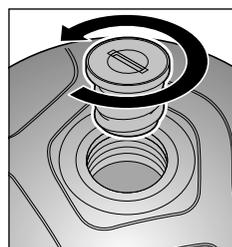


1. Drehen Sie das Batteriefach mit einer Münze oder einem Schlitzschraubendreher heraus.

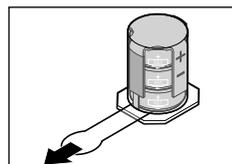


- ▷ Bei Anlieferung sind die Batterien durch einen Isolierstreifen geschützt. Ziehen Sie diesen heraus und setzen Sie das Batteriefach wieder ein.
2. Ziehen Sie den Batterienhalter aus dem Batteriefachdeckel.

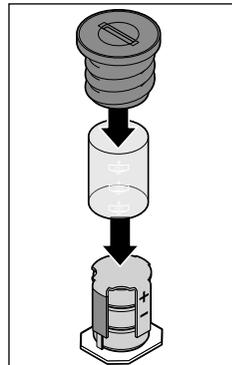


3. Ziehen Sie das transparente Schlauchstück vom Batterienhalter.

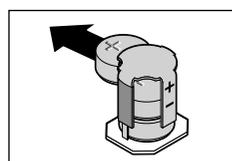

4. Schieben Sie die verbrauchten Batterien seitlich aus dem Batterienhalter heraus.

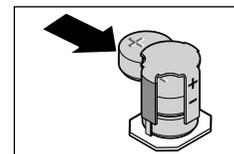


5. Schieben Sie 4 neue Batterien wie abgebildet mit dem Pluspol nach oben in den Batterienhalter.

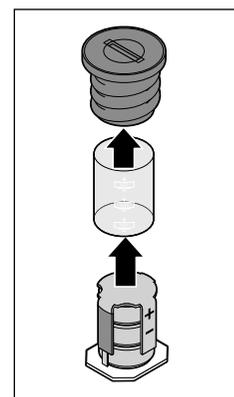

6. Ziehen Sie das transparente Schlauchstück wieder über den Batterienhalter.

7. Stecken Sie den Batterienhalter in den Batteriefachdeckel.

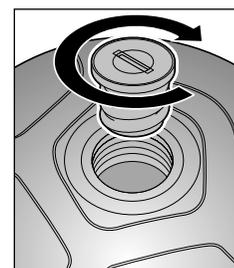

8. Drehen Sie das Batteriefach mit einer Münze oder einem Schlitzschraubendreher wieder in den Ball.

#### Verstauen

- Bewahren Sie den Ball auf keinen Fall in der Nähe einer Heizung oder anderen Wärmequellen auf.
- Es kann nicht völlig ausgeschlossen werden, dass manche Lacke, Kunststoffe oder Bodenpflegemittel das Material des Artikels angreifen und aufweichen. Um unliebsame Spuren auf den Böden zu vermeiden, legen Sie deshalb ggf. eine rutschfeste Unterlage unter den Artikel oder bewahren Sie den Artikel z.B. in einer geeigneten Box auf.

#### Technische Daten

|                      |                          |
|----------------------|--------------------------|
| Modell:              | 629 385                  |
| Leuchtmittel:        | Leuchtdiode (LED)        |
| Batterie:            | je 3x LR44/1,5 V pro LED |
| (im Lieferumfang:    | 6 Ersatzbatterien)       |
| Umgebungstemperatur: | +10 bis +40 °C           |

#### Entsorgen

Der Artikel, seine Verpackung und die mitgelieferten Batterien wurden aus wertvollen Materialien hergestellt, die wiederverwert werden können. Dies verringert den Abfall und schont die Umwelt.

Entsorgen Sie die **Verpackung** sortenrein. Nutzen Sie dafür die örtlichen Möglichkeiten zum Sammeln von Papier, Pappe und Leichtverpackungen.



**Geräte**, die mit diesem Symbol gekennzeichnet sind, dürfen nicht mit dem Hausmüll entsorgt werden! Sie sind gesetzlich dazu verpflichtet, Altgeräte getrennt vom Hausmüll zu entsorgen.



Elektrogeräte enthalten gefährliche Stoffe. Diese können bei unsachgemäßer Lagerung und Entsorgung der Umwelt und Gesundheit schaden. Informationen zu Sammelstellen, die Altgeräte kostenlos entgegennehmen, erhalten Sie bei Ihrer Gemeinde- oder Stadtverwaltung.



**Batterien und Akkus** gehören nicht in den Hausmüll! Sie sind gesetzlich dazu verpflichtet, leere Batterien und Akkus bei einer Sammelstelle Ihrer Gemeinde- oder Stadtverwaltung oder beim batterievertreibenden Fachhandel abzugeben. Kleben Sie die Kontakte vor dem Entsorgen ab.




www.tchibo.de/anleitungen

Made exclusively for: Tchibo GmbH, Überseering 18, 22297 Hamburg, Germany, www.tchibo.de

# Tchibo

## LED Football

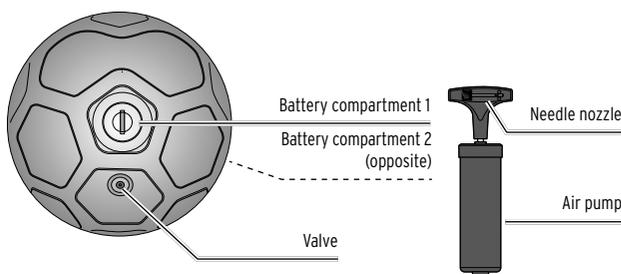

en Instructions for use

Tchibo GmbH D-22290 Hamburg · 121002AB2X2XII · 2021-12

Dear Customer

The 2 opposing LEDs in your new LED football light up when the ball is thrown or kicked. The LEDs turn off automatically after approx. 30 seconds if the ball is not moved.

We hope you enjoy using this product.

Your Tchibo Team



Product number: 629 385

### Safety warnings

Read the safety warnings carefully and only use the product as described in these instructions to avoid accidental injury or damage. Keep these instructions for future reference. If you give this product to another person, remember to also include these instructions.

#### Intended use

The LED football is a toy intended for home use and is not designed to be used as sports equipment. It is not suitable for commercial use in fitness centres, ball sports, or for therapeutic purposes.

The LED football has a maximum load-bearing capacity of 20 kg. It must only be used as described in these instructions. Do not sit on it.

#### WARNING:

- Not suitable for children under 36 months. Small parts. Choking hazard.
- Keep the packaging material out of the reach of children.

#### WARNING - risk of injury and material damage due to single-use/rechargeable batteries

- Do not take the product apart. Do not make any modifications to the product. Improper repairs can result in considerable risks to the user. Only have repairs to the product carried out in a specialist workshop.

- **WARNING.** Dispose of used batteries immediately. Swallowing batteries can be fatal. The product is fitted with button cell batteries. If a button cell battery is swallowed, it can cause severe internal chemical burns and even death within 2 hours. Keep both new and used batteries out of the reach of children. If the battery compartment does not close properly, discontinue use of the product and keep it away from children. If you think that a battery has been swallowed or has got into the body in any other way, seek medical advice immediately.

- Single-use/rechargeable batteries must be inserted or replaced only by adults. If rechargeable batteries are used, these must be charged only under supervision of an adult using a suitable charger for the product. Rechargeable batteries must be removed from the product for charging.


- Ensure correct positioning of the poles (+/-) when inserting the single-use/rechargeable batteries. Only use the same type of battery or its equivalent (see "Technical specifications").

- Single-use batteries must not be charged and single-use/rechargeable batteries must not be taken apart, thrown into fire or short-circuited.

- Remove the single-use/rechargeable batteries when they are flat. This will prevent damage caused by leakage.
- Always replace all single-use/rechargeable batteries at the same time. Do not mix old and new batteries, different types or brands of batteries, or batteries with different capacities.
- If a single-use/rechargeable battery leaks, avoid contact with skin, eyes and mucous membranes. If necessary, rinse the affected areas with water and consult a doctor immediately.

#### WARNING - risk of injury and material damage when inflating the ball

- Do not inflate the ball by blowing into it. Risk of dizziness/fainting!
- Do not inflate the exercise ball to a size greater than the 22 cm specified. The ball must not be completely inflated; you should still be able to depress the surface of the ball slightly with your thumb.

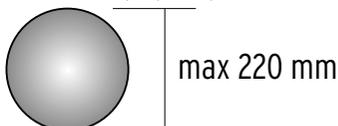

- Do not inflate the ball when the ball is cold. Allow it to rest for at least one hour until it reaches room temperature. The material needs this much time to achieve full elasticity.


- Do not use any pressurised air pumps (e.g. at petrol stations) to inflate the ball. The ball could become overly inflated or may burst.

- Only use air to inflate the ball.


#### CAUTION - material damage

- The LEDs have an extremely long service life and therefore do not need to be replaced. They cannot be replaced without being damaged.
- Protect the product from drops and splashes of water. Do not expose it to rain. Do not immerse it in water.
- Keep the product away from hard, heavy, pointed and sharp objects, as well as from open flames. Protect the product from direct sunlight, extreme temperatures and fluctuations in temperature.

### Inflating the LED football

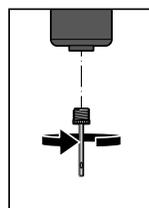

1. Screw the needle nozzle onto the air pump. Wet the needle with a little soapy water before inflating the ball so that the valve does not become damaged.

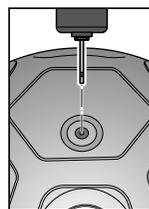

2. Insert the needle nozzle into the valve on the ball. Insert it **until the needle head is fully in contact with the surface of the ball**. If the ball is still completely deflated, hold the pump at an angle so that the needle can be inserted all the way.



It is especially important to insert the needle nozzle all the way when inflating the ball for the first time as the membrane of the valve needs to be punctured. If the ball is particularly difficult to inflate, the membrane has not been properly punctured. In this case, remove the needle nozzle and insert it again until it is all the way inside the valve.

3. Pump up the ball slowly and steadily until it is as full as you wish. However, only inflate the ball up to a maximum diameter of 22 cm as it may otherwise become damaged.




The valve forms an airtight seal as soon as the pump is pulled out.


- ▷ Store the needle nozzle in the handle of the pump.

#### Inserting / replacing batteries


The batteries are already inserted upon delivery. Pull the isolating strip out of the battery compartment.

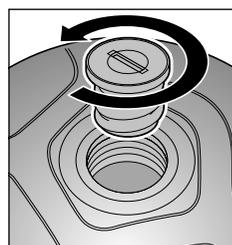


1. Use a coin or flat-tip screwdriver to unscrew the battery compartment.

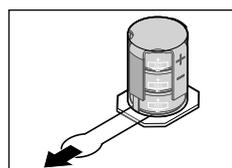


- ▷ The batteries are protected by an insulating strip upon delivery. Pull out this strip and then reinsert the battery compartment.

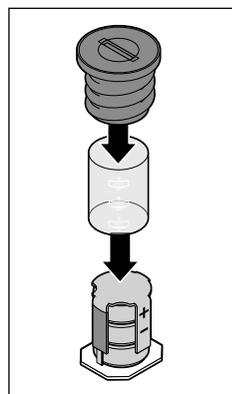


2. Remove the battery holder from the battery compartment lid.
3. Remove the transparent piece of tubing from the battery holder.

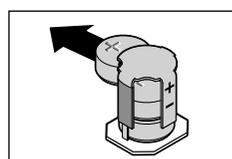


4. Slide the used batteries sideways out of the battery holder.

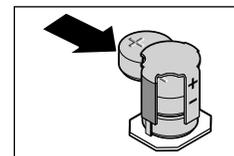

5. Slide 4 new batteries into the battery holder with the plus pole facing upwards, as illustrated.

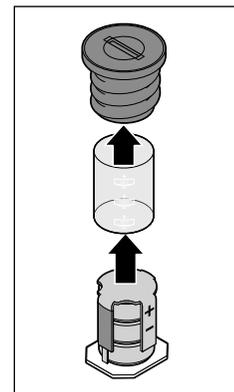

6. Place the transparent piece of tubing back over the battery holder.
7. Insert the battery holder into the battery compartment lid.

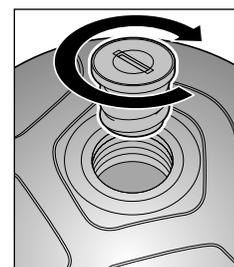

8. Use a coin or flat-tip screwdriver to screw the battery compartment back into the ball.

#### Storage

- Never store the ball next to a radiator or any other source of heat.
- Some varnishes, synthetic substances and floor care products may react adversely with the material of the product and soften it. To avoid unwanted marks on floors, place a non-slip mat underneath the product or store it in a suitable box.

### Technical specifications

|                      |                            |
|----------------------|----------------------------|
| Model:               | 629 385                    |
| Bulb:                | Light-emitting diode (LED) |
| Battery:             | 3x LR44/1.5 V per LED      |
| (included:           | 6 spare batteries)         |
| Ambient temperature: | +10 to +40 °C              |

### Disposal

The product, its packaging and the batteries supplied have been manufactured from valuable materials that can be recycled. Recycling reduces the amount of refuse and helps to preserve the environment.

Dispose of the **packaging** at a recycling point that sorts materials by type. Make use of the local facilities provided for collecting paper, cardboard and lightweight packaging.



**Devices** marked with this symbol must not be disposed of along with normal household waste! You are legally obliged to dispose of old devices separately from household refuse. Electronic devices contain hazardous substances and, if stored or disposed of improperly, may cause harm to health or the environment. Information about collection points where old devices can be disposed of free of charge is available from your local authorities.



**Single-use batteries and rechargeable batteries** must not be disposed of along with household waste! You are legally obliged to dispose of all flat batteries at a local authority collection point or to return them to a battery retailer. Tape off the contacts before disposing of the batteries.



[www.tchibo.de/instructions](http://www.tchibo.de/instructions)

(Please enter the product number in the box labelled "Bedienungsanleitungssuche" and click on "Suchen")

Made exclusively for: Tchibo GmbH, Überseering 18, 22297 Hamburg, Germany