


Maniküre- und Pediküre-Gerät

de Bedienungsanleitung

Auf einen Blick (Lieferumfang)

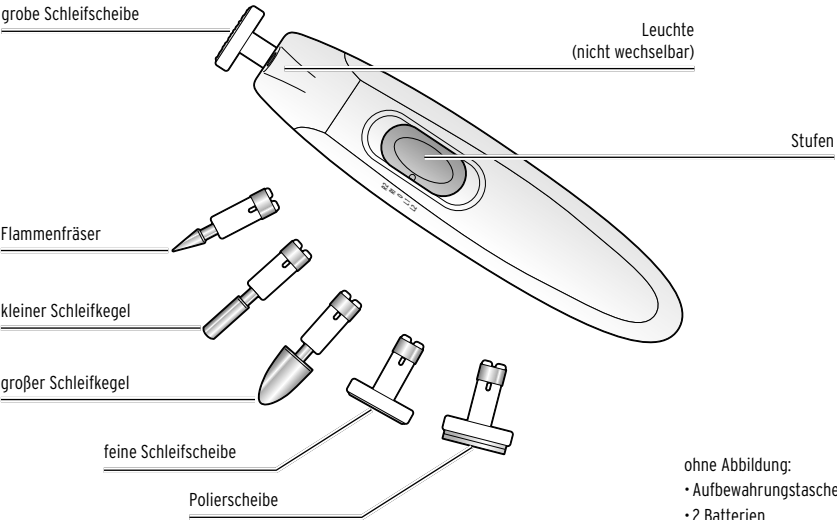

Sicherheitshinweise

Lesen Sie aufmerksam die Sicherheitshinweise und benutzen Sie den Artikel nur wie in dieser Anleitung beschrieben, damit es nicht versehentlich zu Verletzungen oder Schäden kommt. Bewahren Sie diese Anleitung zum späteren Nachlesen auf. Bei Weitergabe des Artikels ist auch diese Anleitung mitzugeben.

Verwendungszweck

Das Gerät ist zur Fuß- und Fingernagelpflege vorgesehen. Der Artikel ist ausschließlich für den Privatgebrauch konzipiert und für die gewerbliche Nutzung (z.B. in Kosmetiksalons oder für die medizinische Fußpflege) nicht geeignet.

Verwenden Sie dieses Gerät nicht, wenn ...

- ... Sie Diabetes oder sonstige Wundheilstörungen haben. Die Möglichkeit, sich mit diesem Gerät zu verletzen, ist extrem gering. Trotzdem müssen wir Sie darauf aufmerksam machen, dass Sie das Gerät bei den genannten Krankheiten nicht benutzen sollten.
- ... eine andere Person das Gerät bereits benutzt hat. Das Gerät bzw. die beiliegenden Aufsätze sollten jeweils nur von einer Person benutzt werden. So vermeiden Sie die Übertragung von z.B. Nagelpilz.
- ... die Haut in der Nähe der Nägel offene Wunden oder Entzündungen aufweist, mit denen das Gerät während des Betriebs in Berührung kommen könnte.

Gefahr für Kinder und Personen mit eingeschränkter Fähigkeit Geräte zu bedienen

- Kinder dürfen nicht mit dem Gerät spielen. Halten Sie Kinder unter 8 Jahren vom Gerät fern.
- Dieses Gerät kann von Kindern ab 8 Jahren sowie von Personen mit ...
 - ... eingeschränkten physischen, sensorischen oder geistigen Fähigkeiten oder ...
 - ... Mangel an Erfahrung und/oder Wissen benutzt werden, wenn sie ...

- Nehmen Sie das Gerät nicht in Betrieb, wenn es sichtbare Schäden aufweist. Wenn ein Aufsatz beschädigt oder stark abgenutzt ist, verwenden Sie ihn nicht weiter.

Sachschäden


- Schützen Sie das Gerät vor Stößen, Stürzen, Staub, direkter Sonneneinstrahlung und extremen Temperaturen.
- Schützen Sie das Gerät vor Feuchtigkeit. Tauchen Sie es nicht in Wasser oder andere Flüssigkeiten ein.
- Verwenden Sie nur das Original-Zubehör.
- Reinigen Sie die Batterie- und Gerätekontakte bei Bedarf vor dem Einlegen. Überhitzungsgefahr!
- Ersetzen Sie immer alle Batterien. Mischen Sie keine alten und neuen Batterien, verschiedene Batterie-Typen, -Marken oder Batterien mit unterschiedlicher Kapazität. Achten Sie beim Einsetzen der Batterien auf die richtige Polarität (+/-).
- Schützen Sie Batterien vor übermäßiger Wärme. Nehmen Sie die Batterien aus dem Artikel heraus, wenn diese erschöpft sind oder Sie den Artikel länger nicht benutzen. So vermeiden Sie Schäden, die durch Auslaufen entstehen können.
- Das Leuchtmittel kann und darf nicht ausgetauscht werden.

Technische Daten

Modell:	682 465
Batterien:	2x LR03(AAA)/1,5V (ZnMnO2)
Umgebungstemperatur:	+10 bis +40 °C
Made exclusively for:	Tchibo GmbH, Überseering 18, 22297 Hamburg, Germany www.tchibo.de

Im Zuge von Produktverbesserungen behalten wir uns technische und optische Veränderungen am Artikel vor.

Batterien einlegen

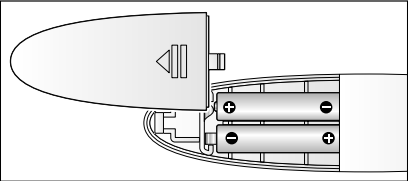


1. Öffnen Sie das Batteriefach auf der Geräterückseite, indem Sie leicht auf die geriffelte Fläche drücken und den Deckel in Pfeilrichtung abschieben.
2. Legen Sie die Batterien wie im Batteriefach abgebildet ein. Achten Sie dabei auf die richtige Polarität (+/-).
3. Schließen Sie das Batteriefach wieder. Der Batteriefachdeckel muss hör- und spürbar einrasten.


Ein Batteriewechsel wird notwendig, wenn sich die Aufsätze kaum oder gar nicht mehr bewegen.

Bedienung


- VORSICHT - Verletzungsgefahr**
- Halten Sie lange Haare von sich bewegenden Teilen fern.
 - Verwenden Sie das Gerät nicht längere Zeit auf ein- und derselben Stelle. Die Aufsätze drehen sich mit hoher Geschwindigkeit, wodurch sich Hitze entwickelt.

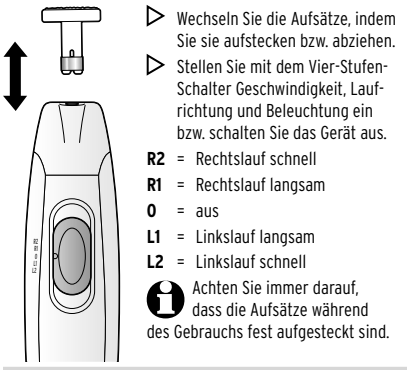

Nägel kürzen und polieren





Damit die Nägel nicht zu kurz werden, braucht es ein wenig Übung. Beginnen Sie deshalb anfangs mit langsamer Geschwindigkeit (Schalter-Stufe 1).

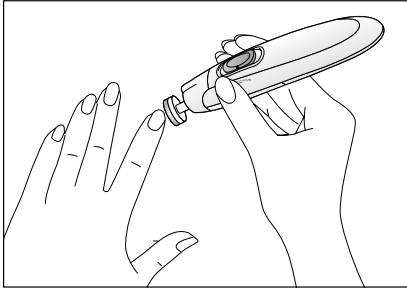

1. Kürzen Sie die Finger- oder Zehennägel mit den Schleifscheiben und bringen Sie sie dabei gleichzeitig in Form. Führen Sie die Scheibe dabei immer von der Außenseite des Nagels zur Nagelspitze.
- Die Schleifscheiben sind in eine Ummantelung eingebettet, wodurch Verletzungen nahezu ausgeschlossen sind.
2. Polieren Sie anschließend mit kreisenden Bewegungen die Nageloberfläche. Lassen Sie die Polierscheibe nicht auf einer Stelle ruhen; durch die Reibung kommt es zu einer starken Wärmeentwicklung.

Nagelhaut entfernen

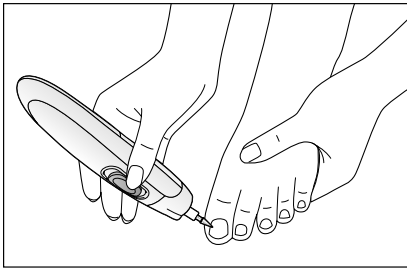



- ▷ Entfernen Sie Nagelhaut seitlich der Nägel mit dem Flammenfräser. Dies ist vor allem an den Zehen erforderlich.

Die Nagelhaut auf den Nägeln sollte wie gewohnt nach vorherigem Einweichen zurückgeschoben werden. Hierfür empfiehlt sich der Flammenfräser nicht, da sonst leicht Rillen in die Nägel geätzt werden.

Hornhaut und Schwielen entfernen

Waschen Sie die Füße nicht unmittelbar vor der Behandlung. Auf weicher Haut hat der Aufsatz keine Wirkung. Deshalb immer auf vollständig trockener Haut arbeiten.

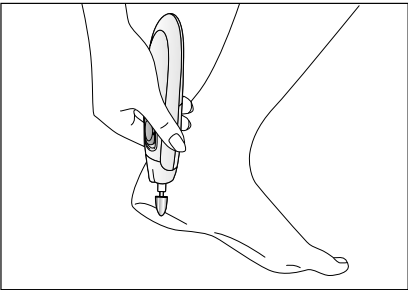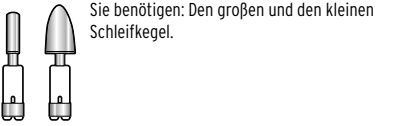

- ▷ Entfernen Sie starke und grobe Hornhaut (z.B. mit einem Hornhauthobel), bevor Sie diese mit dem Schleifkegel bearbeiten. Lassen Sie immer einen kleinen Rest Hornhaut übrig, damit die Haut geschützt bleibt.

Reinigen und desinfizieren


- ▷ Ziehen Sie den benutzen Aufsatz vom Gerät ab. Reinigen Sie die Schleifteile mit einer kleinen, weichen Bürste und bei Bedarf mit Ethylalkohol, den Sie in Apotheken erhalten.
- ▷ Wischen Sie das Gerät nach jeder Benutzung mit einem trockenen oder leicht mit klarem Wasser angefeuchteten Tuch ab, um Nagelstaub zu entfernen.
- ▷ Bewahren Sie das Gerät bei Nichtgebrauch an einem kühlen, trockenen Ort geschützt vor Sonneneinstrahlung auf.

Entsorgen

- Geräte, Batterien und Akkus die mit diesem Symbol gekennzeichnet sind, dürfen nicht mit dem Hausmüll entsorgt werden! Sie sind gesetzlich dazu verpflichtet, Altgeräte getrennt vom Hausmüll zu entsorgen. Elektrogeräte enthalten gefährliche Stoffe. Diese können bei unsachgemäßer Lagerung und Entsorgung der Umwelt und Gesundheit schaden. Informationen zu Sammelstellen, die Altgeräte kostenlos entgegennehmen, erhalten Sie bei Ihrer Gemeinde- oder Stadtverwaltung. Altgeräte aus privaten Haushalten können bei Sammelstellen der öffentlich-rechtlichen Entsorgungsträger oder bei von Tchibo im Sinne des ElektroG eingerichteten Rücknahmestellen unentgeltlich abgegeben werden. Rücknahmestellen in Ihrer Nähe finden Sie unter: www.take-e-back.de. Weitere Informationen zur kostenlosen Rückgabe von Elektroartikeln finden Sie unter www.tchibo.de/entsorgung. Leere Batterien und Akkus müssen bei einer Sammelstelle Ihrer Gemeinde- oder Stadtverwaltung oder beim batterievertreibenden Fachhandel abgegeben werden. Kleben Sie bei Lithium-Batterien die Kontakte vor dem Entsorgen ab.

Manicure and Pedicure Set

Instructions for use

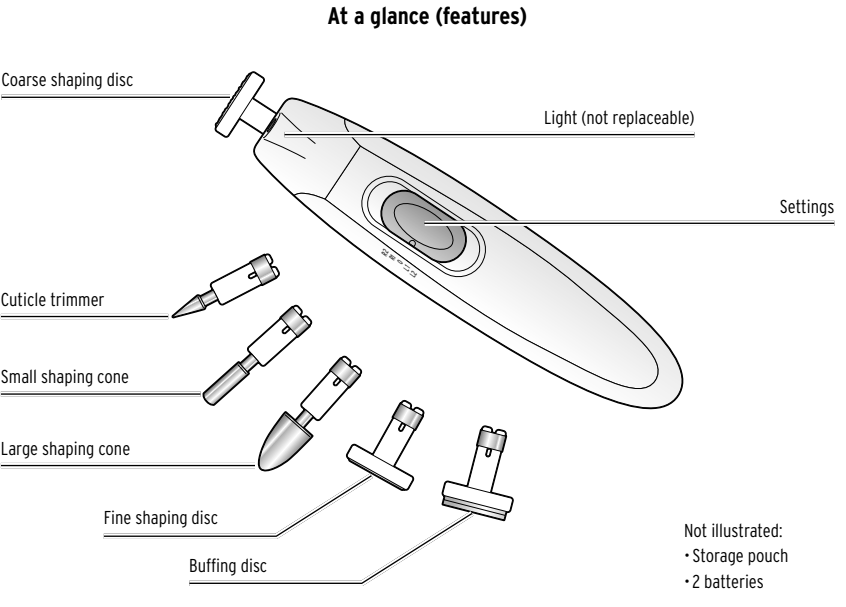

Safety warnings

Read the safety warnings carefully and only use the product as described in these instructions to avoid accidental injury or damage. Keep these instructions for future reference. If you give this product to another person, remember to also include these instructions.

Intended use

The device is intended for fingernail and toenail care. The product is designed for private use only and is not suitable for commercial purposes (e.g. in beauty salons or for medical foot care).

Do not use the device if ...

... you suffer from diabetes or other wound-healing disorders. The possibility of injuring yourself with this device is very slight. Nevertheless, we are obliged to draw your attention to the fact that you should not use it if you suffer from the illnesses mentioned above.

... another person has already used it.

The device and attachments that come with it should be used by one person only. This will prevent the spread of infections such as athlete's foot.

... the skin near the nails has open wounds or inflammations with which the device could come into contact during use.

Danger to children and to people with limited ability to operate devices

- Children must not be allowed to play with the device. Keep children under 8 years of age away from the device.
- This device can be used by children aged 8 and over and by people with ...

... reduced physical, sensory or mental capabilities or ... lack of experience and/or knowledge, provided they are ... supervised or

... have been trained in the safe use of the device and ... understand the potential dangers.

Children must not be allowed to clean the device unless they are over 8 years of age and supervised while doing so. This device is maintenance-free.

- The device may not be used on children under the age of 8.
- Swallowing batteries can be fatal. Swallowing a battery can cause severe internal chemical burns and even death within 2 hours. Therefore, keep both new and old batteries and the product out of the reach of children. If you think a battery has been swallowed or has entered the body in any other way, seek medical advice immediately.
- Keep the packaging materials out of the reach of children. They pose several risks, including the risk of suffocation!

Danger of fire / explosion

- Single-use batteries must not be charged, taken apart, thrown into fire or short-circuited.

Risk of injury

- If a battery has leaked, avoid contact with skin, eyes and mucous membranes. Rinse the affected areas with water and consult a doctor immediately.
- Do not use the device on the same spot for a prolonged period. The attachments rotate at high speed, generating heat. There is a risk of burns!
- When the device is in use, keep it away from long hair, loose clothing and similar. These may get caught in the rotating attachments.
- Do not use the device if it shows any signs of damage. Do not use attachments that are damaged or very worn down.

Material damage

- Protect the device from knocks, falls, dust, direct sunlight and extreme temperatures.
- Protect the device from moisture. Do not immerse it in water or other liquids.
- Only use the original accessories.
- If necessary, clean the battery and device contacts before inserting the batteries. Risk of overheating!


- Always replace all batteries at the same time. Do not mix old and new batteries and do not use different types or brands of batteries, or batteries with different capacities. When inserting the batteries, ensure correct polarity (+/-).
- Protect batteries from excessive heat. Remove the batteries from the product when they are flat or if you do not intend to use the product for a prolonged period of time. This will prevent damage caused by leakage.
- The light source cannot and must not be replaced.

Technical specifications

Model:	682 465
Single-use batteries:	2x LR03 (AAA)/1.5V (ZnMnO ₂)
Ambient temperature:	+10 to +40 °C
Made exclusively for:	Tchibo GmbH, Überseering 18, 22297 Hamburg, Germany

In the course of product improvement, we reserve the right to make technical and optical modifications to the product.

Inserting batteries

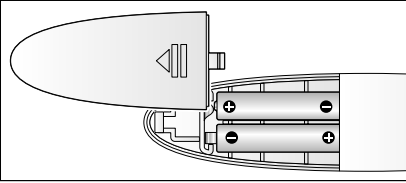


1. Open the battery compartment on the back of the device by applying slight pressure to the textured area and sliding the lid off in the direction of the arrow.
2. Insert the batteries into the battery compartment as illustrated. Ensure that the polarity (+/-) is correct.
3. Close the battery compartment. You should be able to feel and hear the lid click into place.

The batteries must be replaced if the attachments do not rotate anymore or only rotate slowly.

Use

CAUTION - risk of injury

- Keep long hair away from moving parts.
- Do not use the device on the same spot for a prolonged period. The attachments rotate at high speed, generating heat.

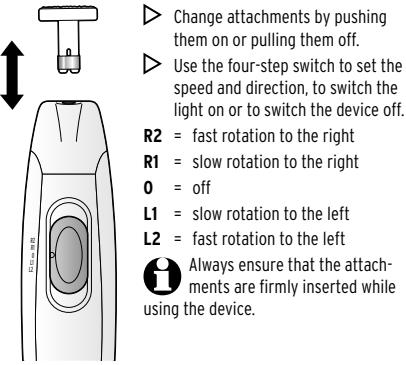

- Change attachments by pushing them on or pulling them off.
- Use the four-step switch to set the speed and direction, to switch the light on or to switch the device off.

R2 = fast rotation to the right
R1 = slow rotation to the right
0 = off
L1 = slow rotation to the left
L2 = fast rotation to the left


Always ensure that the attachments are firmly inserted while using the device.

Trimming and polishing nails





You will need: the shaping discs and the buffing disc.

It will take some practice to ensure that your nails do not become too short. Therefore, start with a slow speed (level 1 setting).

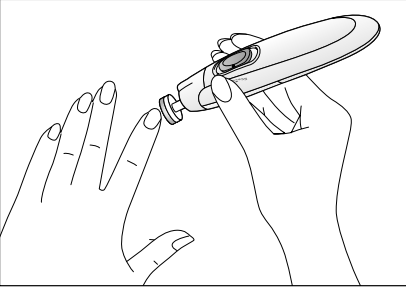

1. Simultaneously trim and shape your finger and toenails with the shaping discs. Always guide the disc from the side of the nail towards the tip.
- The shaping discs are embedded in a casing, meaning that the possibility of injuries is virtually eliminated.
2. Then polish the surface of your nail in a circular motion. Do not let the buffing disc rest in one place for too long, as the friction causes intense heat to develop.

Removing cuticles

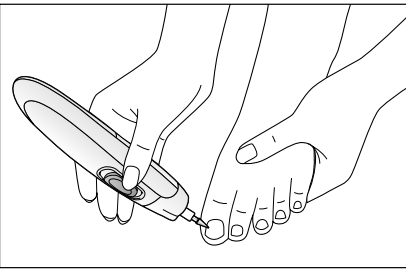


- Remove cuticles at the sides of your nails with the cuticle trimmer. This is especially necessary on your toes.

The cuticles at the base of your nails should be pushed back in the usual manner after being previously soaked.


We advise against using the cuticle trimmer for this purpose as it can easily cause indentations in your nails.

Removing hard skin and calluses

Do not wash your feet directly before treatment, as the attachment does not have any effect on soft skin. Therefore always work on completely dry skin.

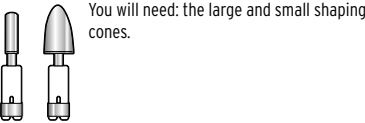

You will need: the large and small shaping cones.

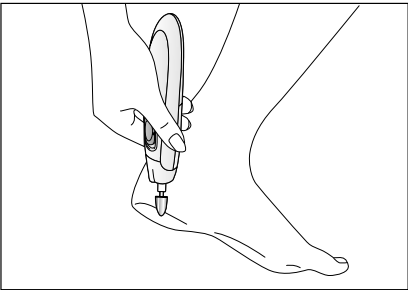

- Remove tough and coarse hard skin and calluses (with a callus remover file, for example) before treating these areas with the shaping cone.
- Always leave a little bit of hard skin remaining so that the skin is protected.

Cleaning and disinfecting

- Pull the used attachment off the device. Clean the shaping parts as needed with a small, soft brush and, if necessary, ethyl alcohol (available from pharmacies).
- After each use, wipe off the device with a dry cloth or one that has been slightly dampened with water in order to clean off any leftover nail residue.
- When not in use, store the device in a cool, dry place that is protected from sunlight.

Disposal

Devices, single-use batteries and rechargeable batteries marked with this symbol must not be disposed of along with household waste! You are legally obliged to dispose of old devices separately from household waste. Electronic devices contain hazardous substances and, if stored or disposed of improperly, may cause harm to health and the environment. Information about collection points where old devices can be disposed of free of charge is available from your local authorities. Flat single-use and rechargeable batteries must be handed in at a local authority collection point or returned to a battery retailer. Tape off the contacts of lithium single-use/rechargeable batteries prior to disposal.