




# Shutter wall

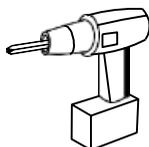

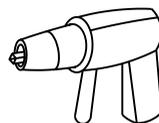


**A** x1

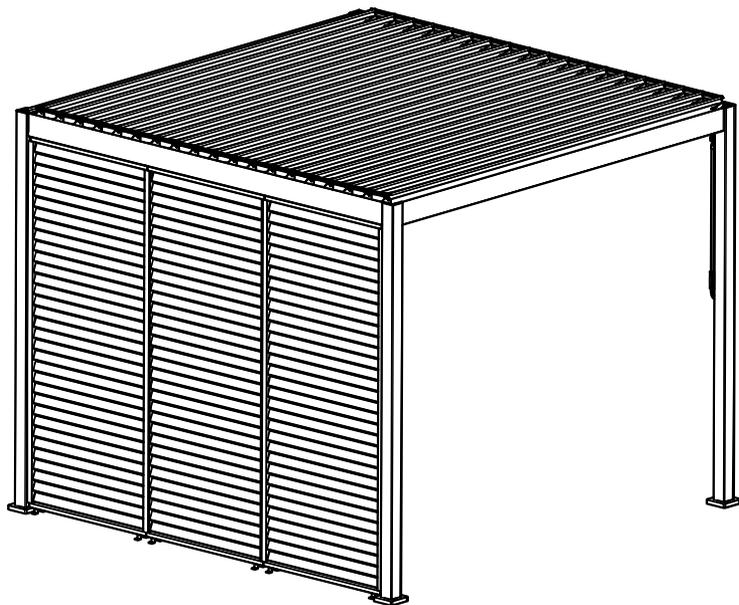

**B** x1



**C** x1

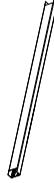


**D** x1




**E** x3




**F** x30

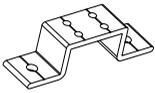


**G** x2

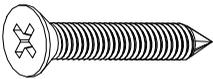


**H** x15

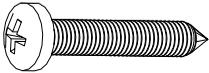

**I** x21

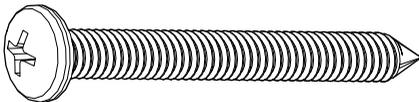

**J** x4

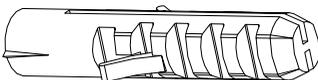

**K** x4






1





**B** x1



**E** x3

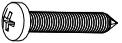



**I** x6

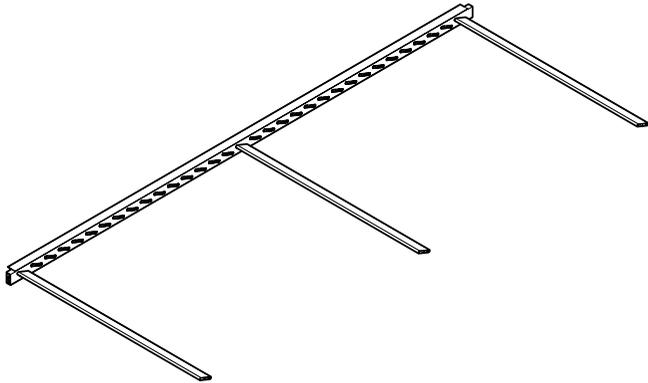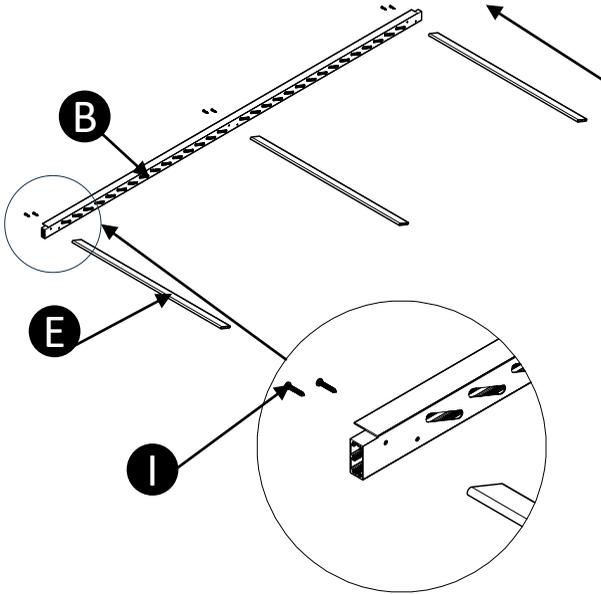

2



**F** x30

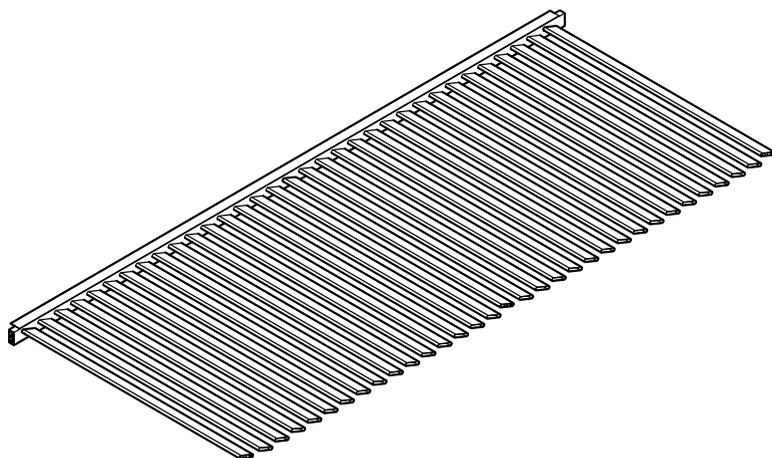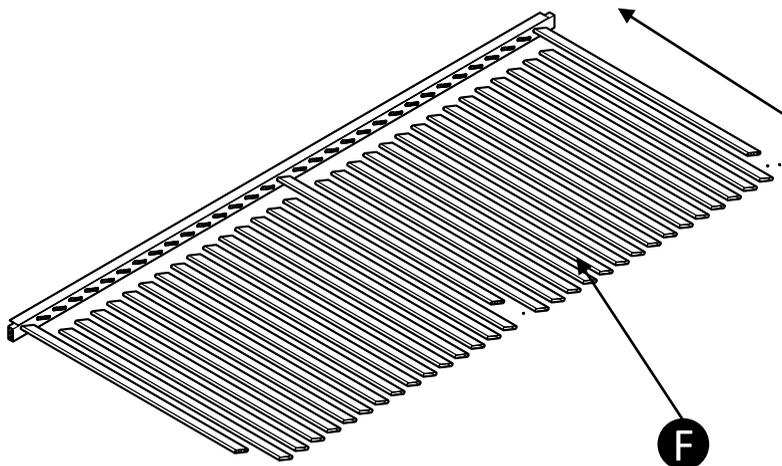




3



**A** x1



**I** x6

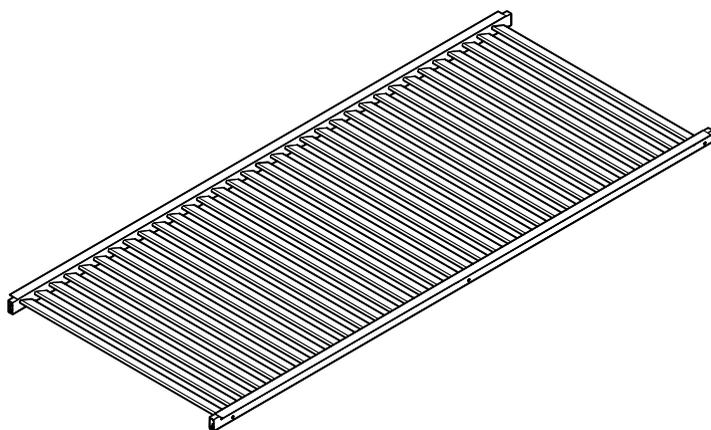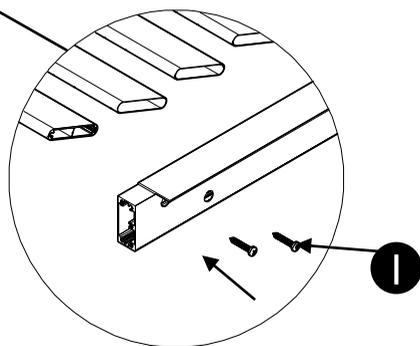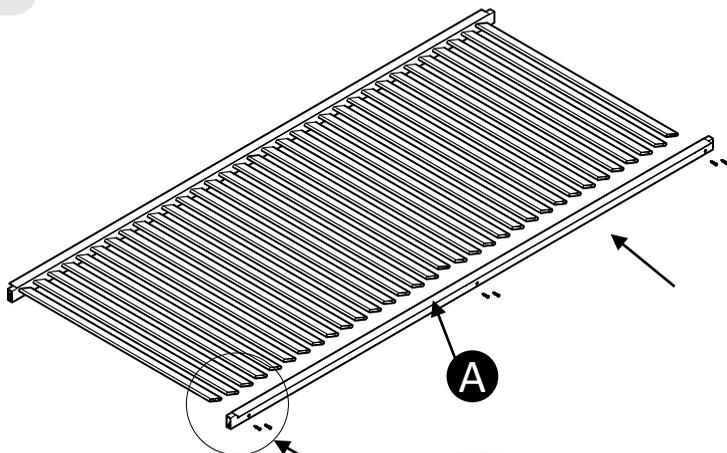



4

Pay attention to the direction of assembly.








**C** x1



**D** x1




**H** x14

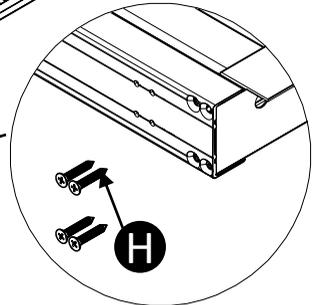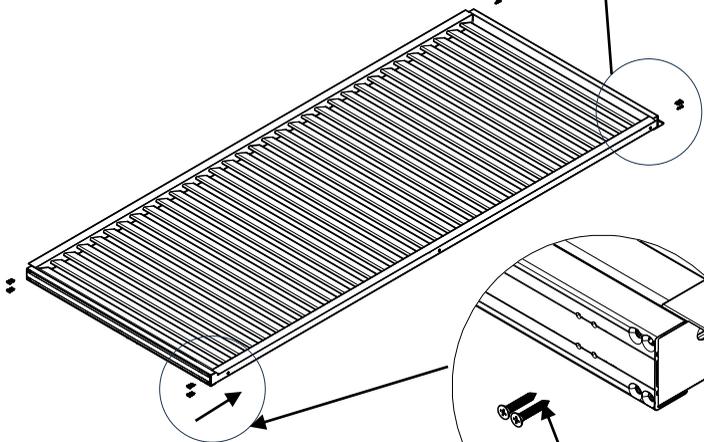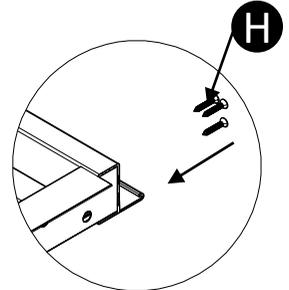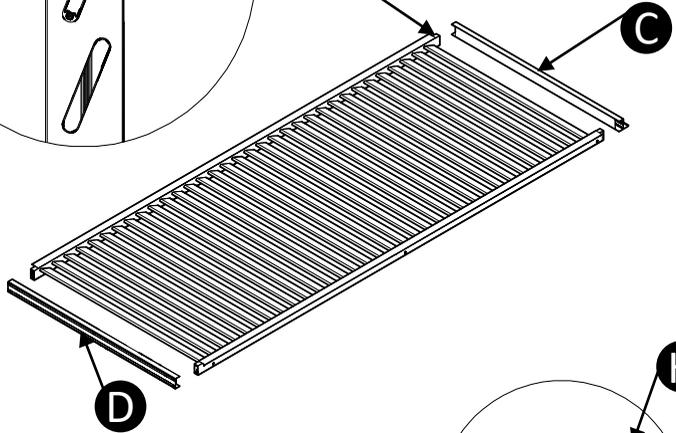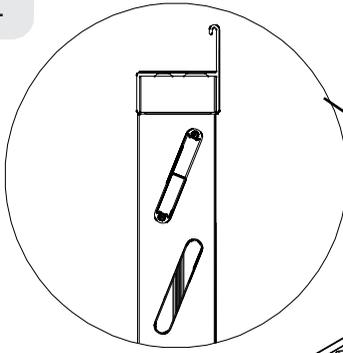








5

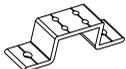

**G** x2

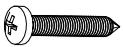


**I** x8

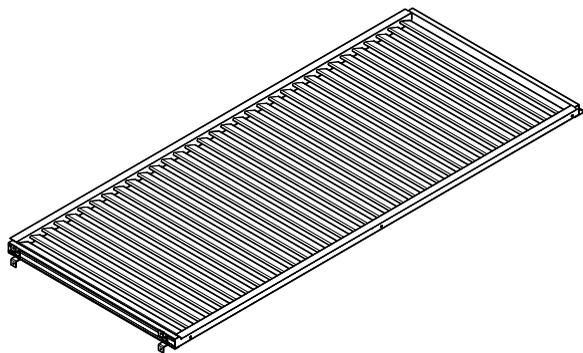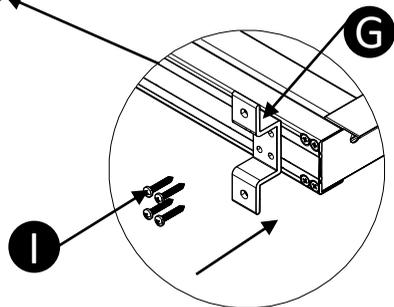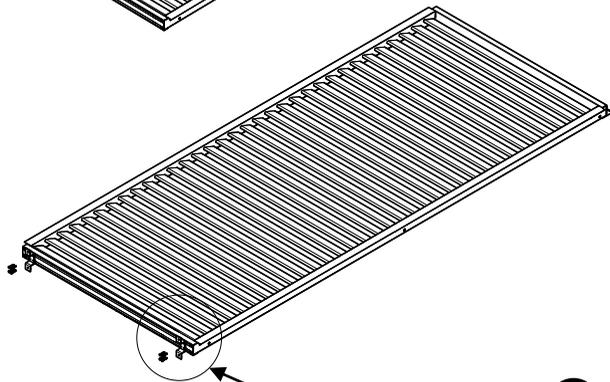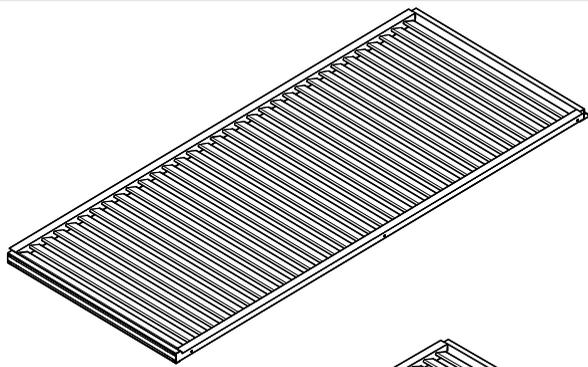



6

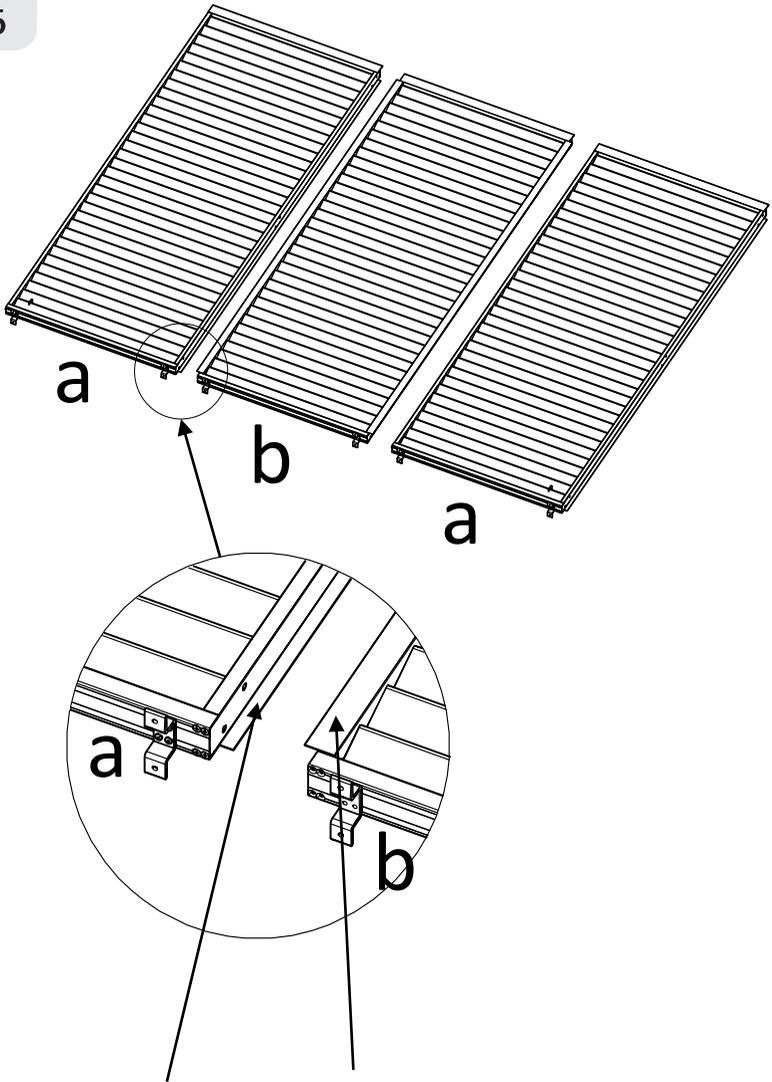




When assembling the shutter walls, Note the side tube direction:

a: The side pipe hanging out part is opposite the top beam hook


b: The side pipe hanging out part is the same plane as the top beam hook



**K** x8

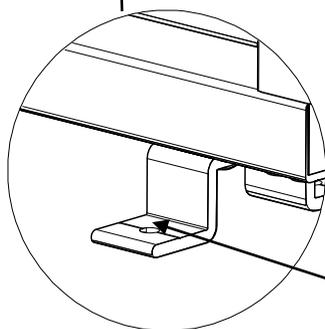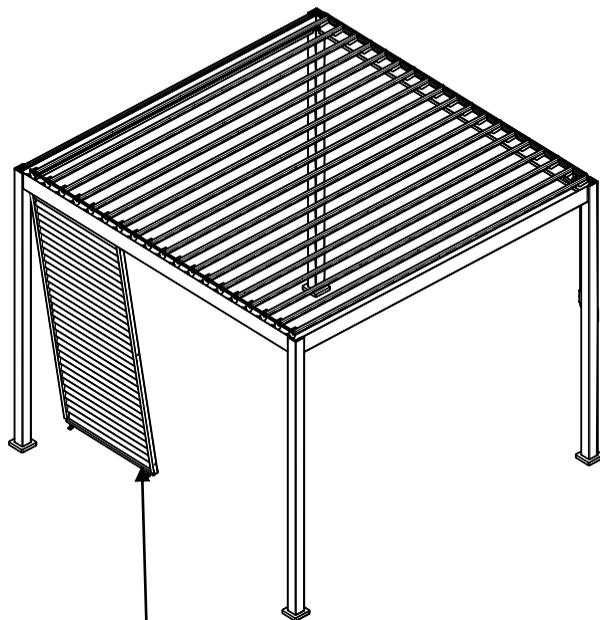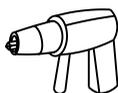


Draw lines, drill holes, tap in plastic expansion pipe.

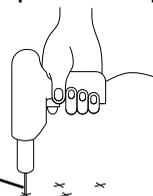

If the floor is a wood floor, you don't need to knock in the plastic expansion pipe, directly use J to knock




**K**

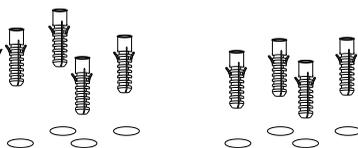


8



**J** x4

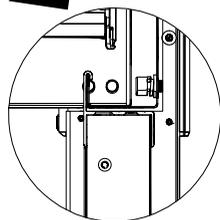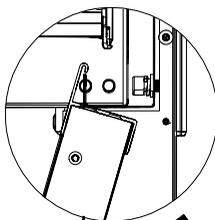
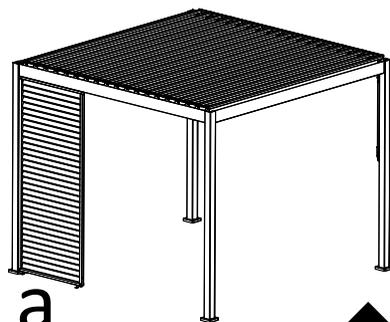


Adjust the spacing to ensure that the three shutter walls are roughly equally spaced.

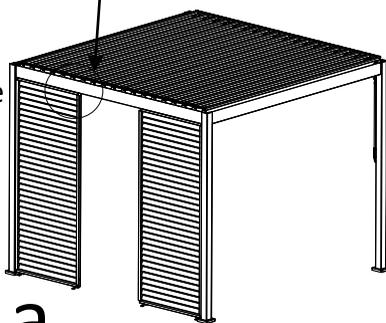

a

a

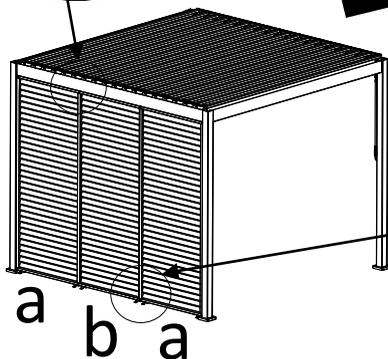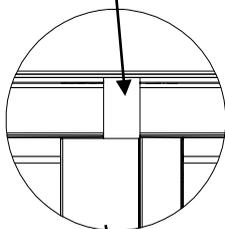


a

b

a

**J**

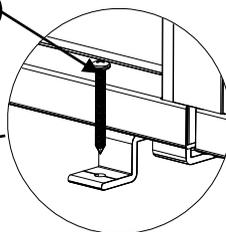



9

