
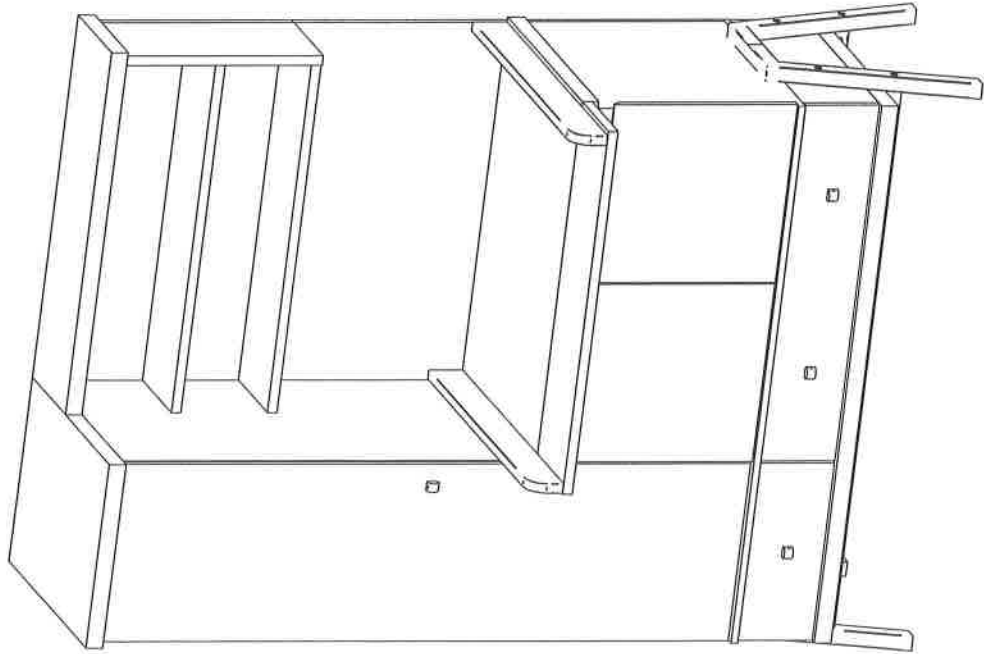







Holly 06 921




Inhalt - Contents - Contenu - Inhoud - contenido-contenúdo - περιεχόμενο

A		B		C		D		E	
8 x		16 x		4 x		8 x		2 x	
F		G		H		I		J	
4 x		3 x		3 x		1 x		2 x	
K		L		M		N		O	
6,3 x 50 lang		SW 5		14 x		M4 x 20		4 x	
14 x		1 x		14 x		4 x		4 x	
P		Q		R		S		T	
2 Satz 450 mm		6,3 x 10 kurz		6,3 x 13 lang		Φ8 40 mm lang		Φ8 30 mm lang	
4 x		4 x		4 x		5 x		9 x	
U		V		W		X		Z	
Metall 12/13		M6 x 60		M6 x 40		M6 x 12		6,3 x 50 lang	
4 x		4 x		4 x		4 x		6 x	





Inhalt - Contents - Contenu - Inhoud - contenuto - co: nido-conteúdo - περιεχόμενο

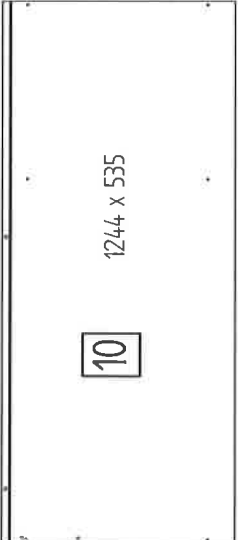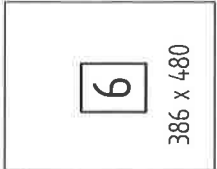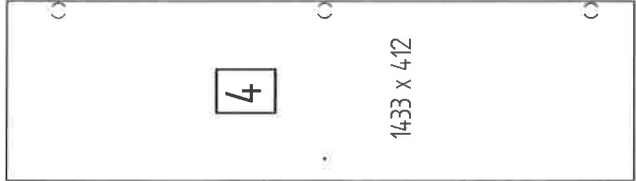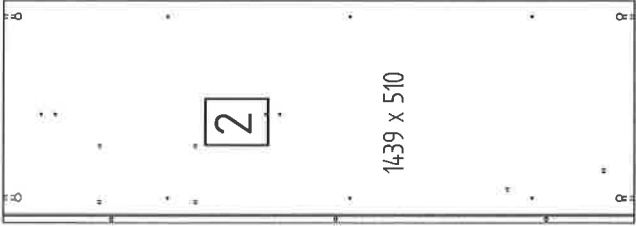
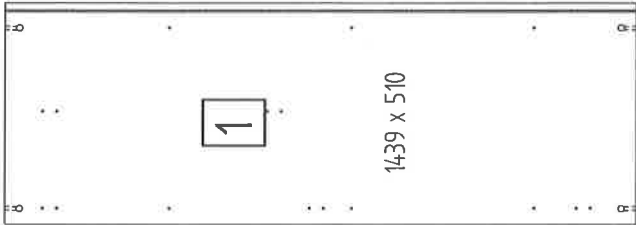


2 x links

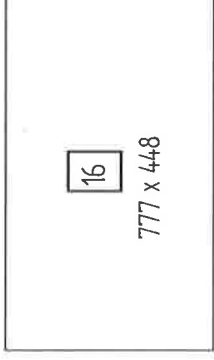








2 x rechts




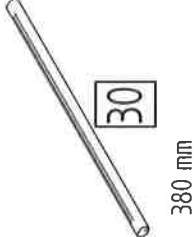
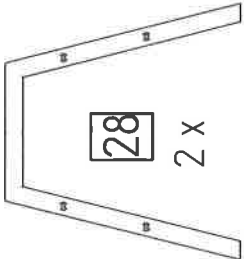

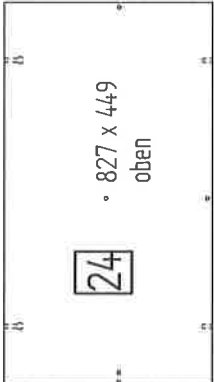


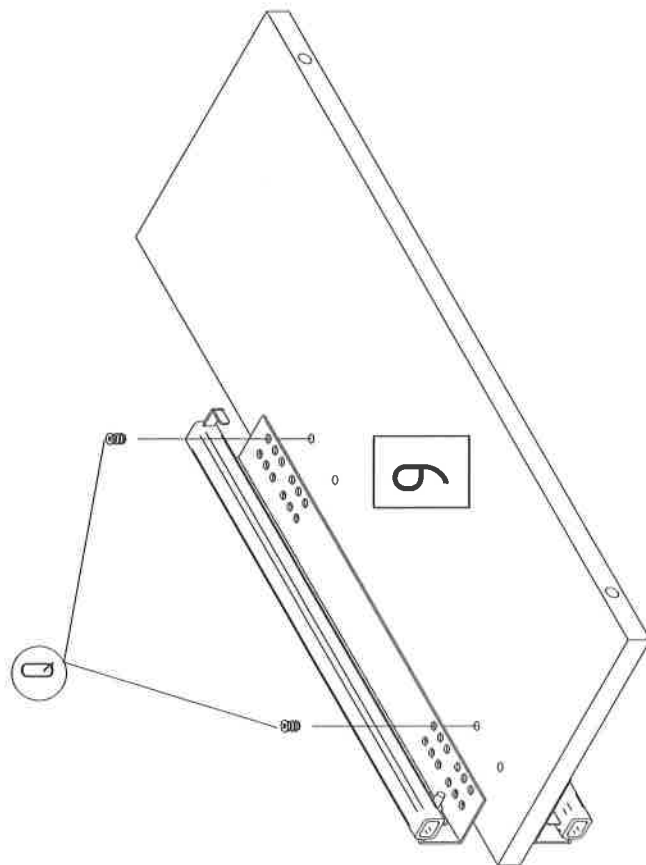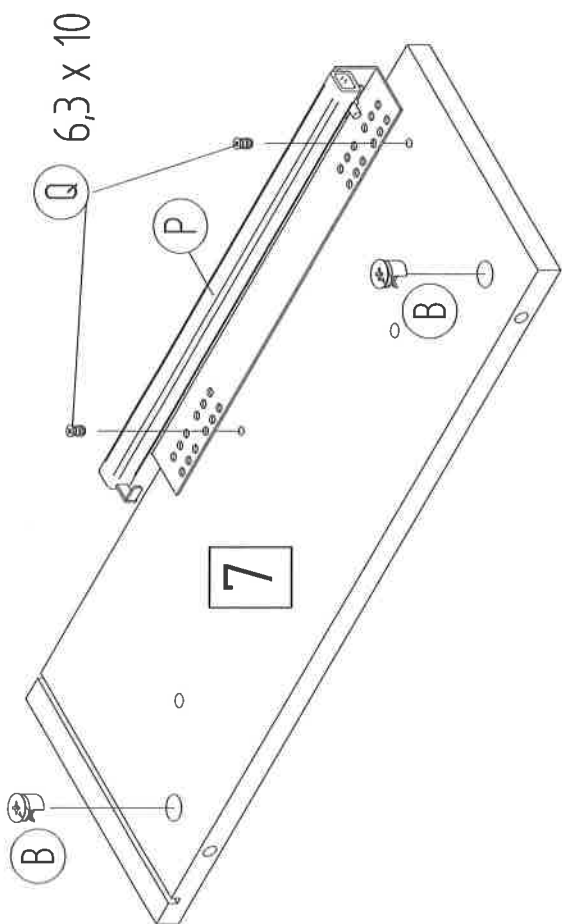


gedreht

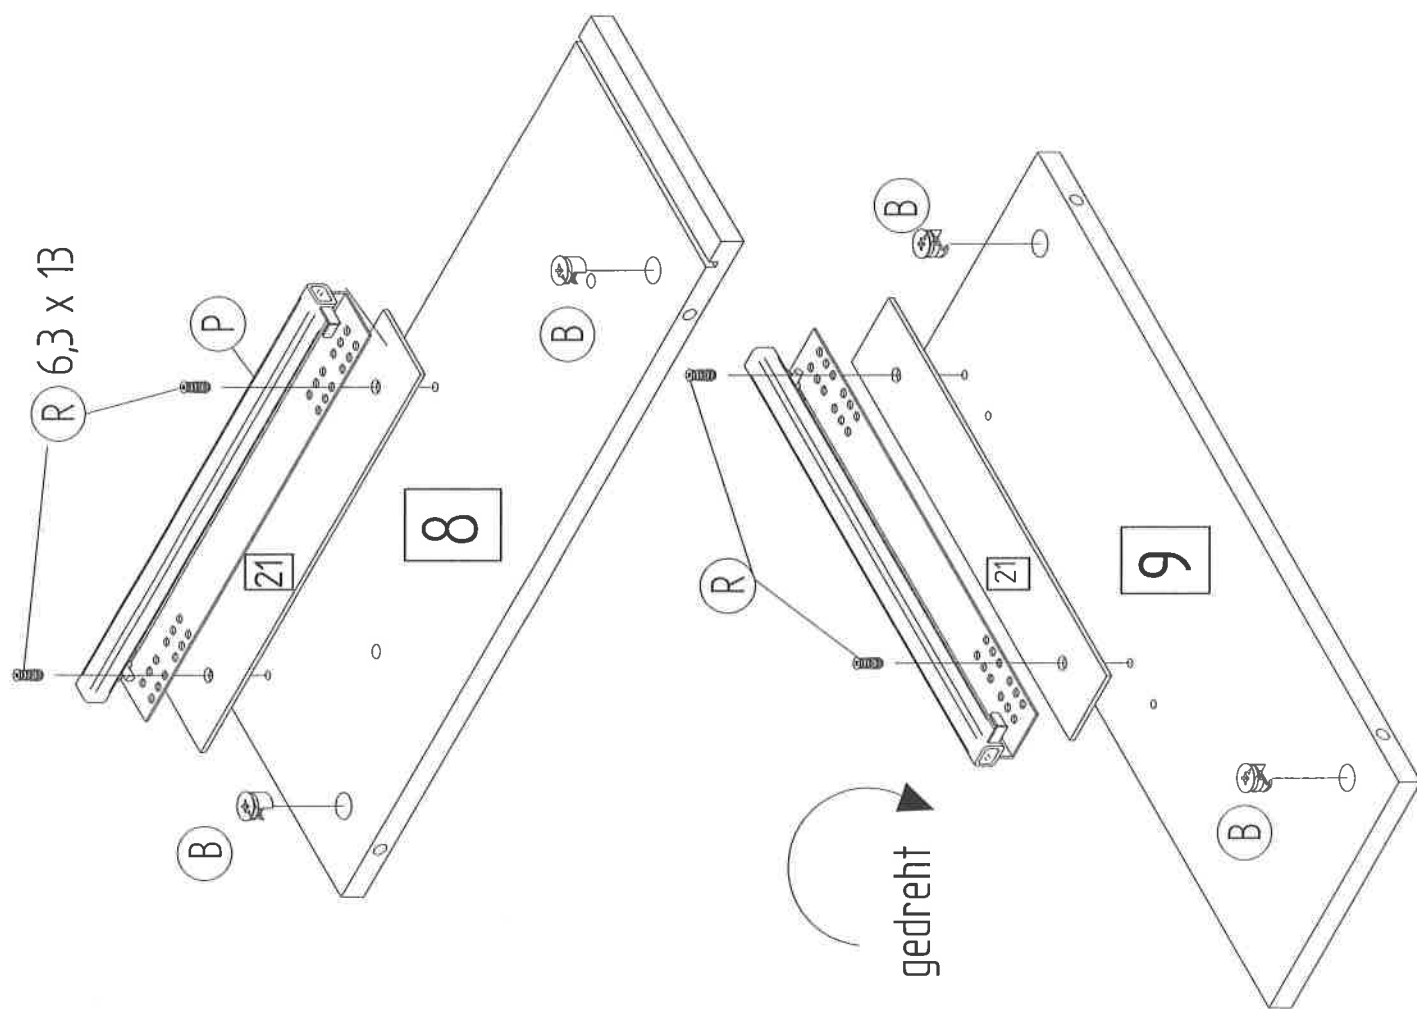

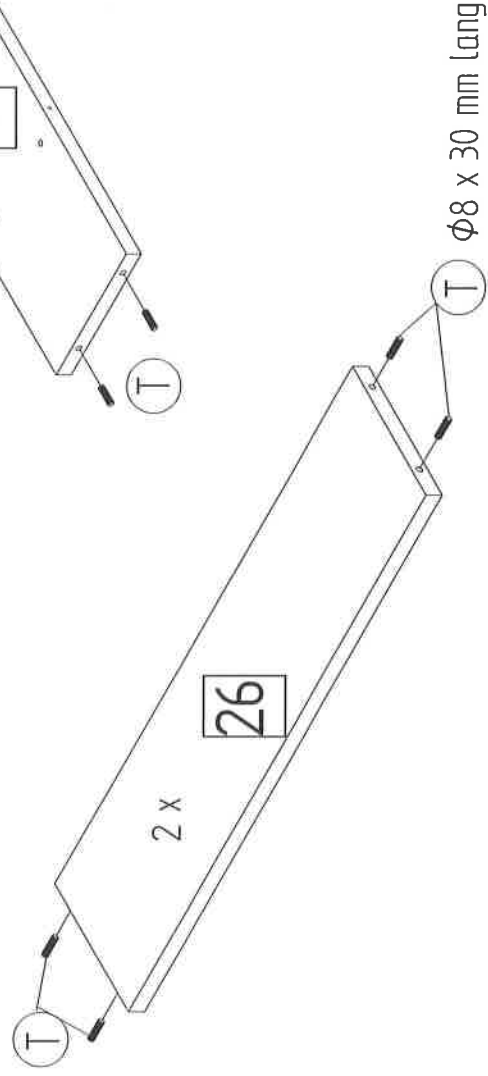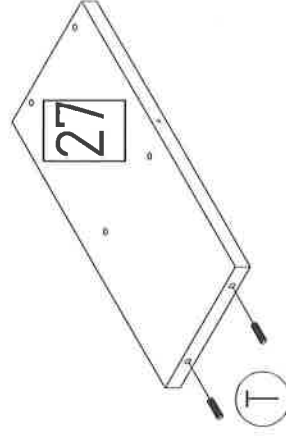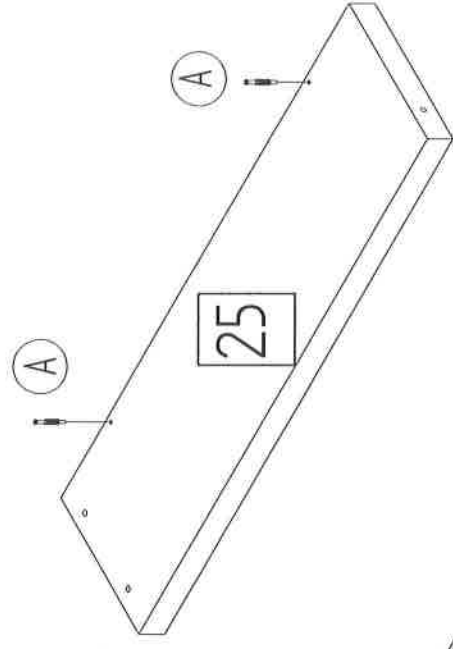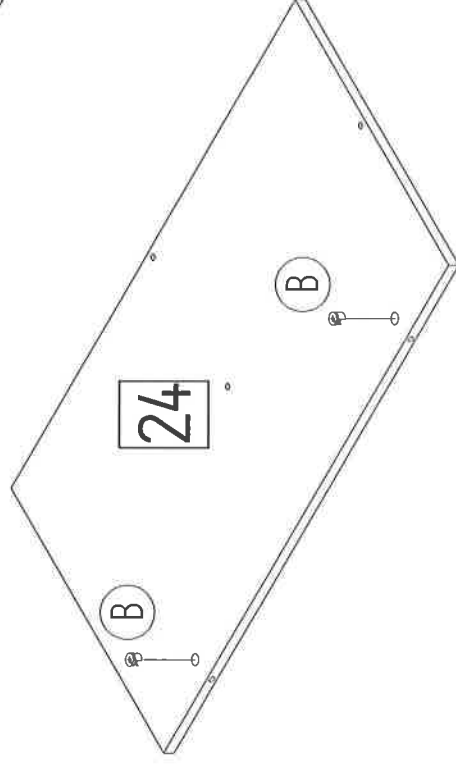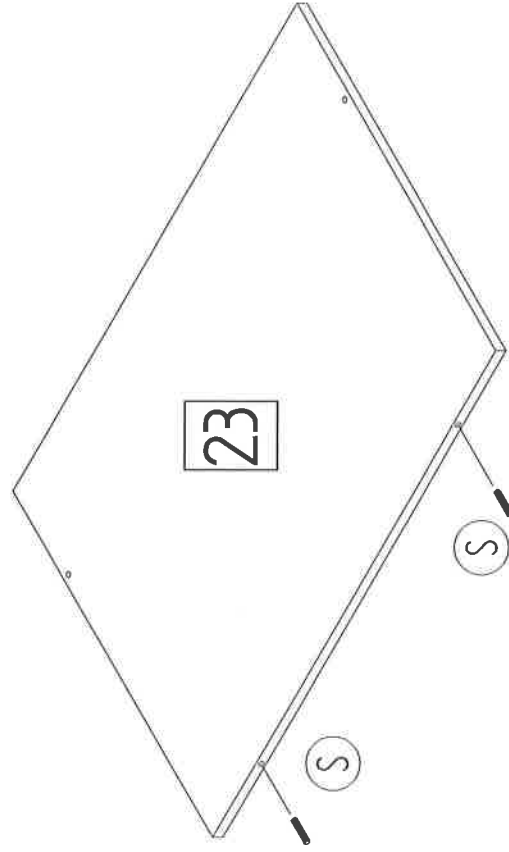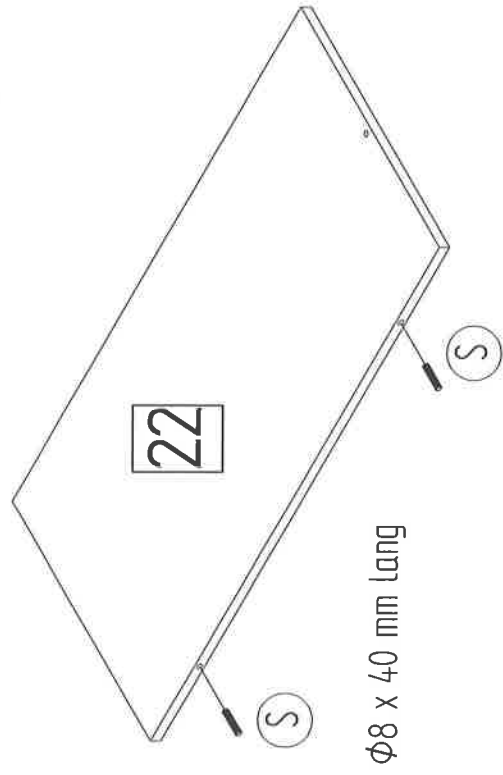


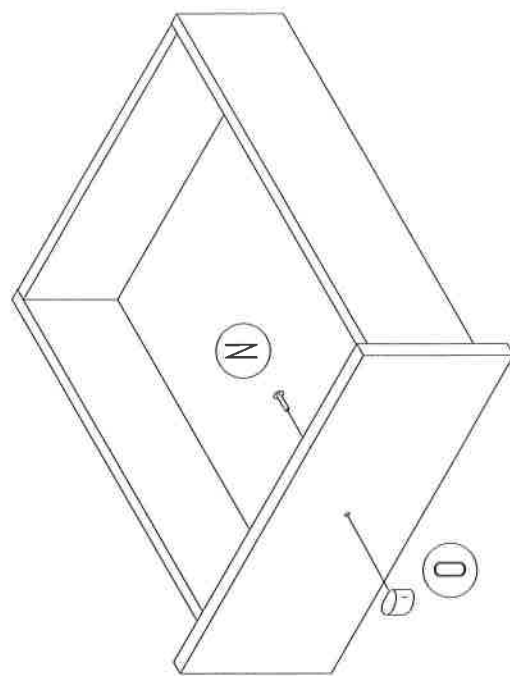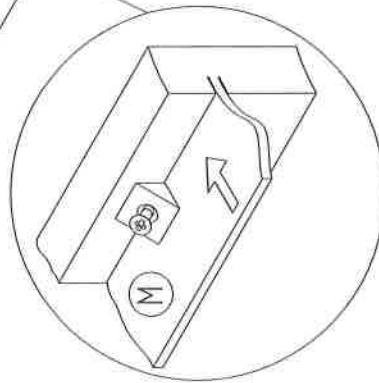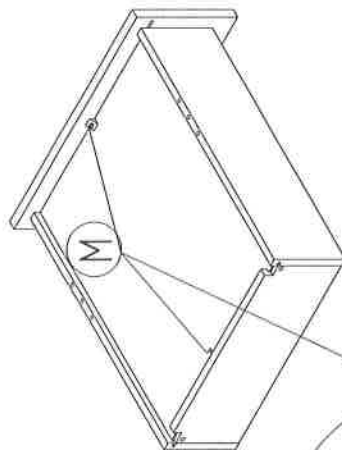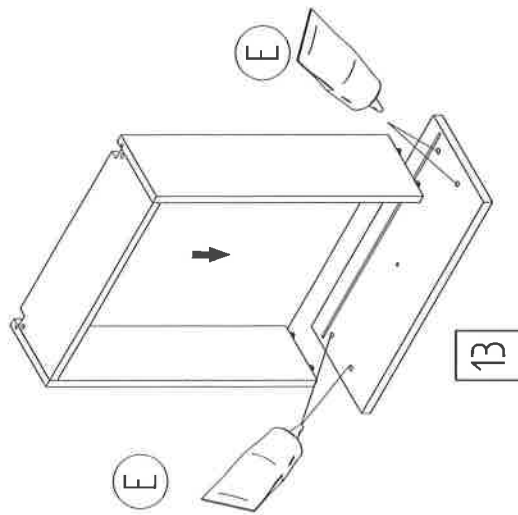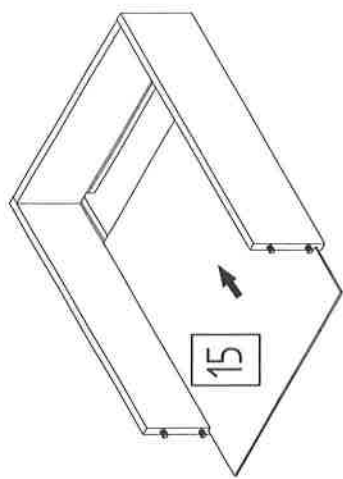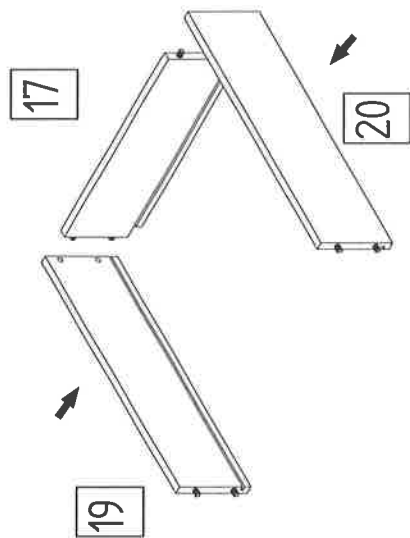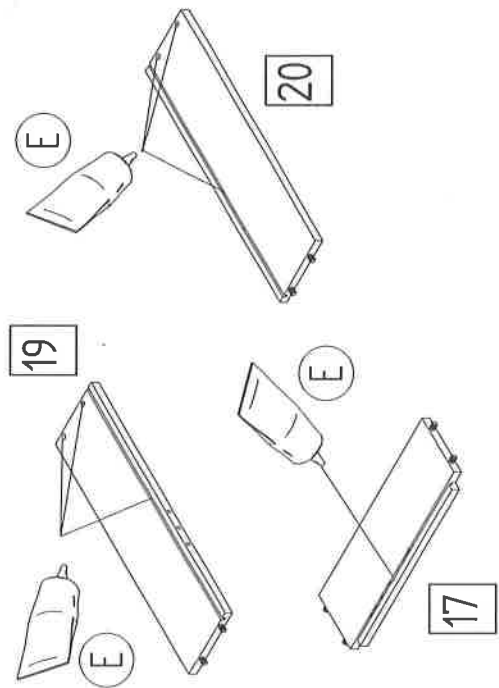





Vor weiterer Montage der Beschläge den Leim 30 min abbinden lassen.
 Before further installation of the fittings the glue thicken for 30 minutes.
 Avant l'installation ultérieure des raccords, la colle épaissir pendant 30 minutes.
 Voor verdere montage van het beslag de lijm dik gedurende 30 minuten.
 Prima ulteriore installazione dei raccordi addensare la colla per 30 minuti.
 Antes de la instalación posterior de los accesorios de la cola espesar durante 30 minutos.
 Antes da instalação posterior dos acessórios a engrossar cola durante 30 minutos.
 Πριν από την περαιτέρω εγκατάσταση των εξαρτημάτων πυκνώσει η κόλλα για 30 λεπτά.



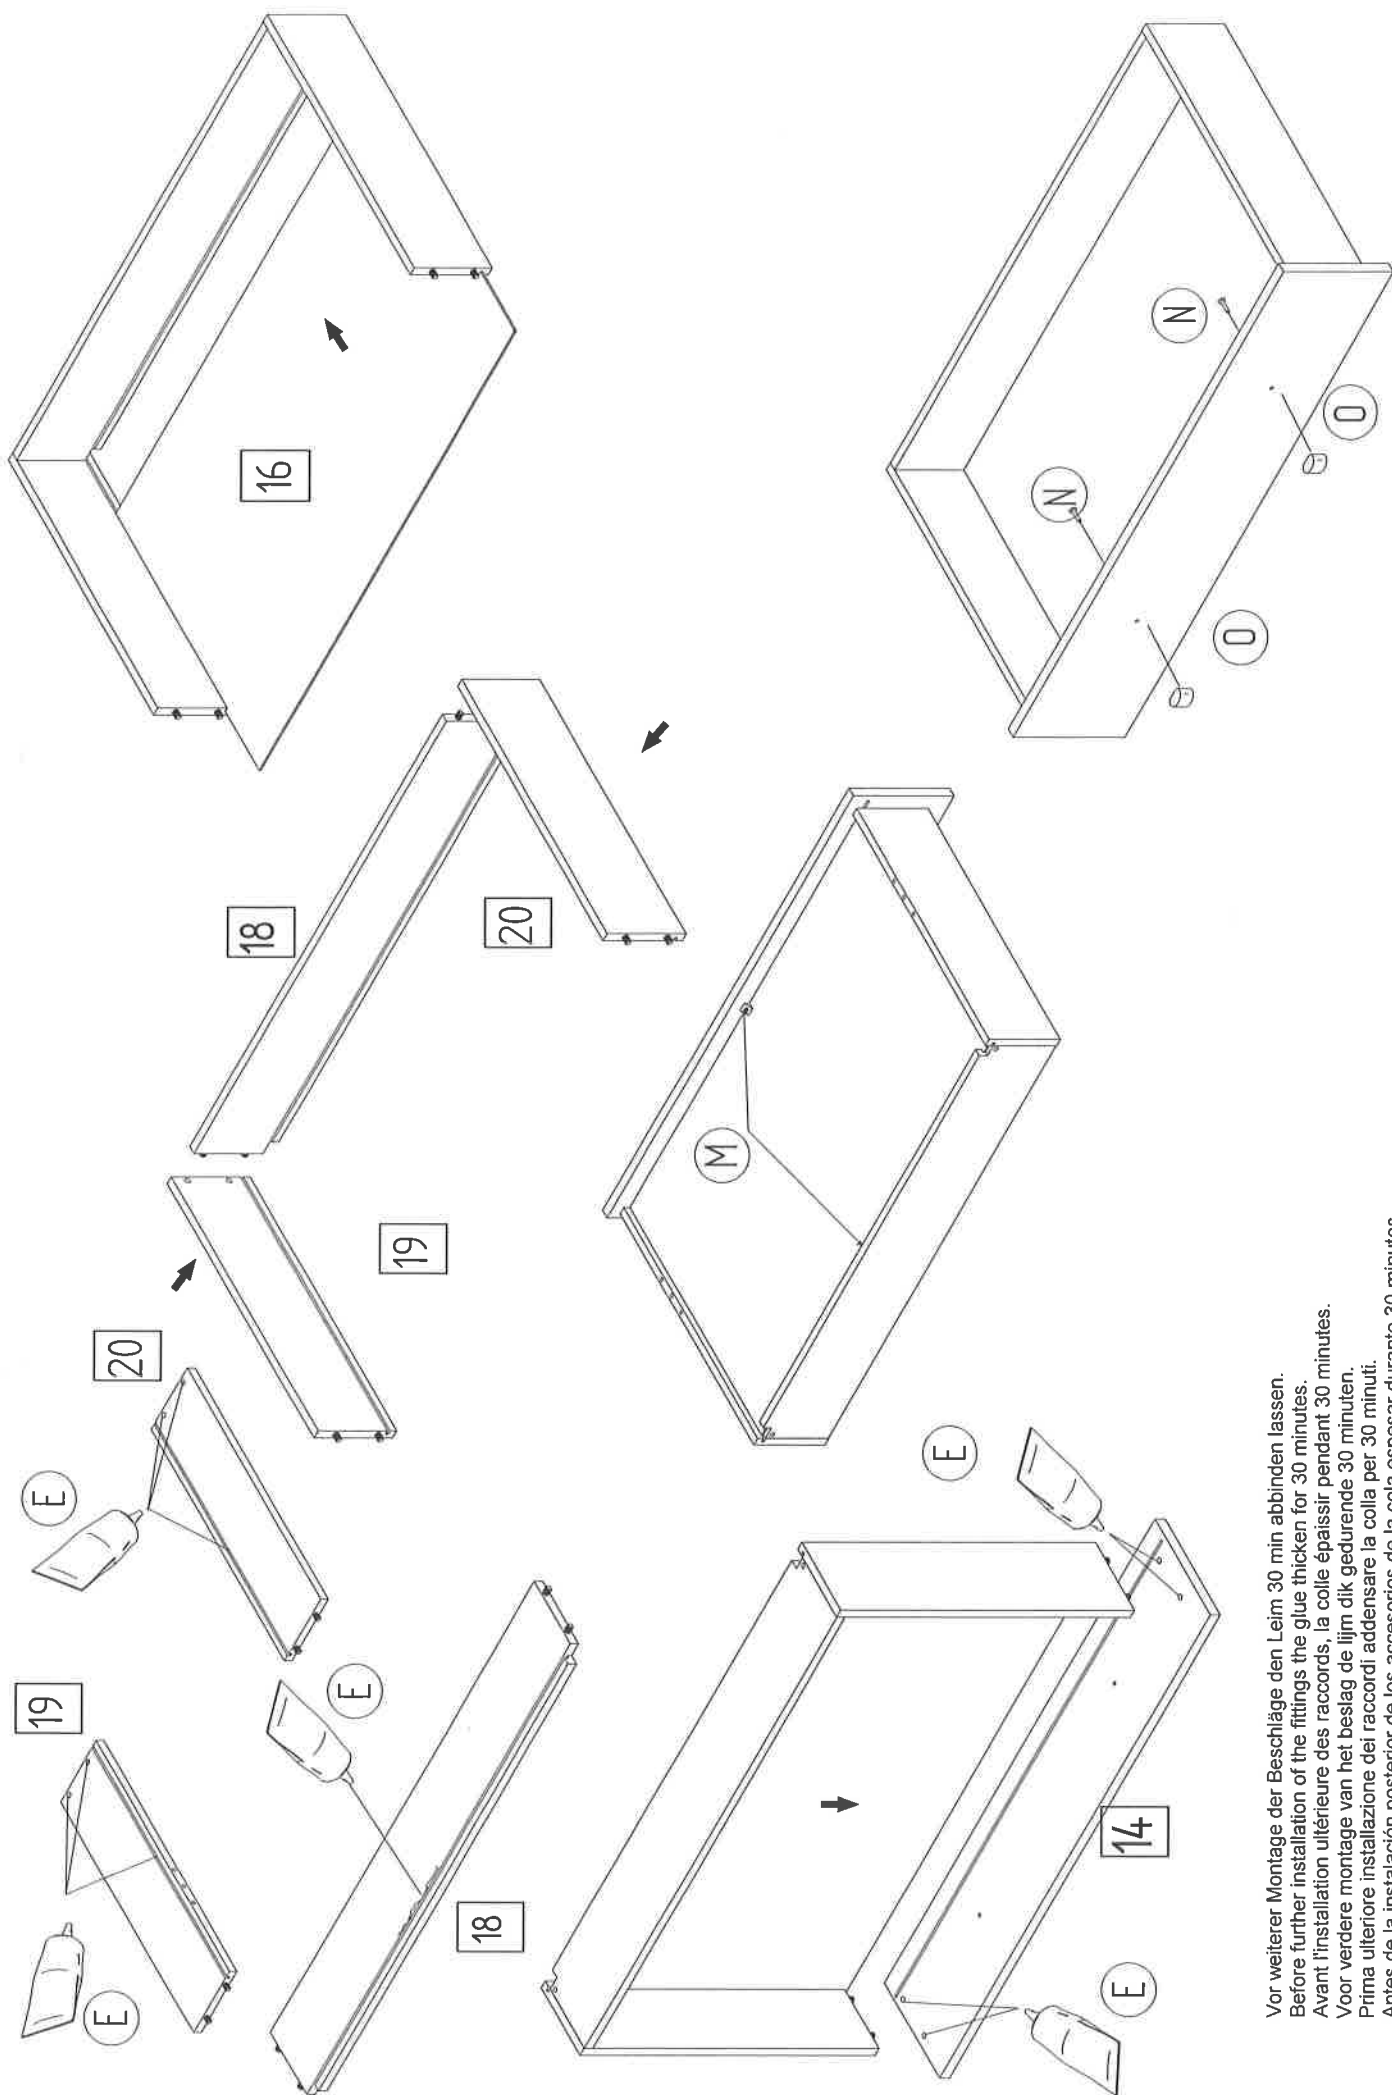








Vor weiterer Montage der Beschläge den Leim 30 min abbinden lassen.
 Before further installation of the fittings the glue thicken for 30 minutes.
 Avant l'installation ultérieure des raccords, la colle épaissir pendant 30 minutes.
 Voor verdere montage van het beslag de lijm dik gedurende 30 minuten.
 Prima ulteriore installazione dei raccordi addensare la colla per 30 minuti.
 Antes de la instalación posterior de los accesorios de la cola espesar durante 30 minutos.
 Antes da instalação posterior dos acessórios a engrossar cola durante 30 minutos.
 Πριν από την περαιτέρω εγκατάσταση των εξαρτημάτων πυκνώσει η κόλλα για 30 λεπτά.




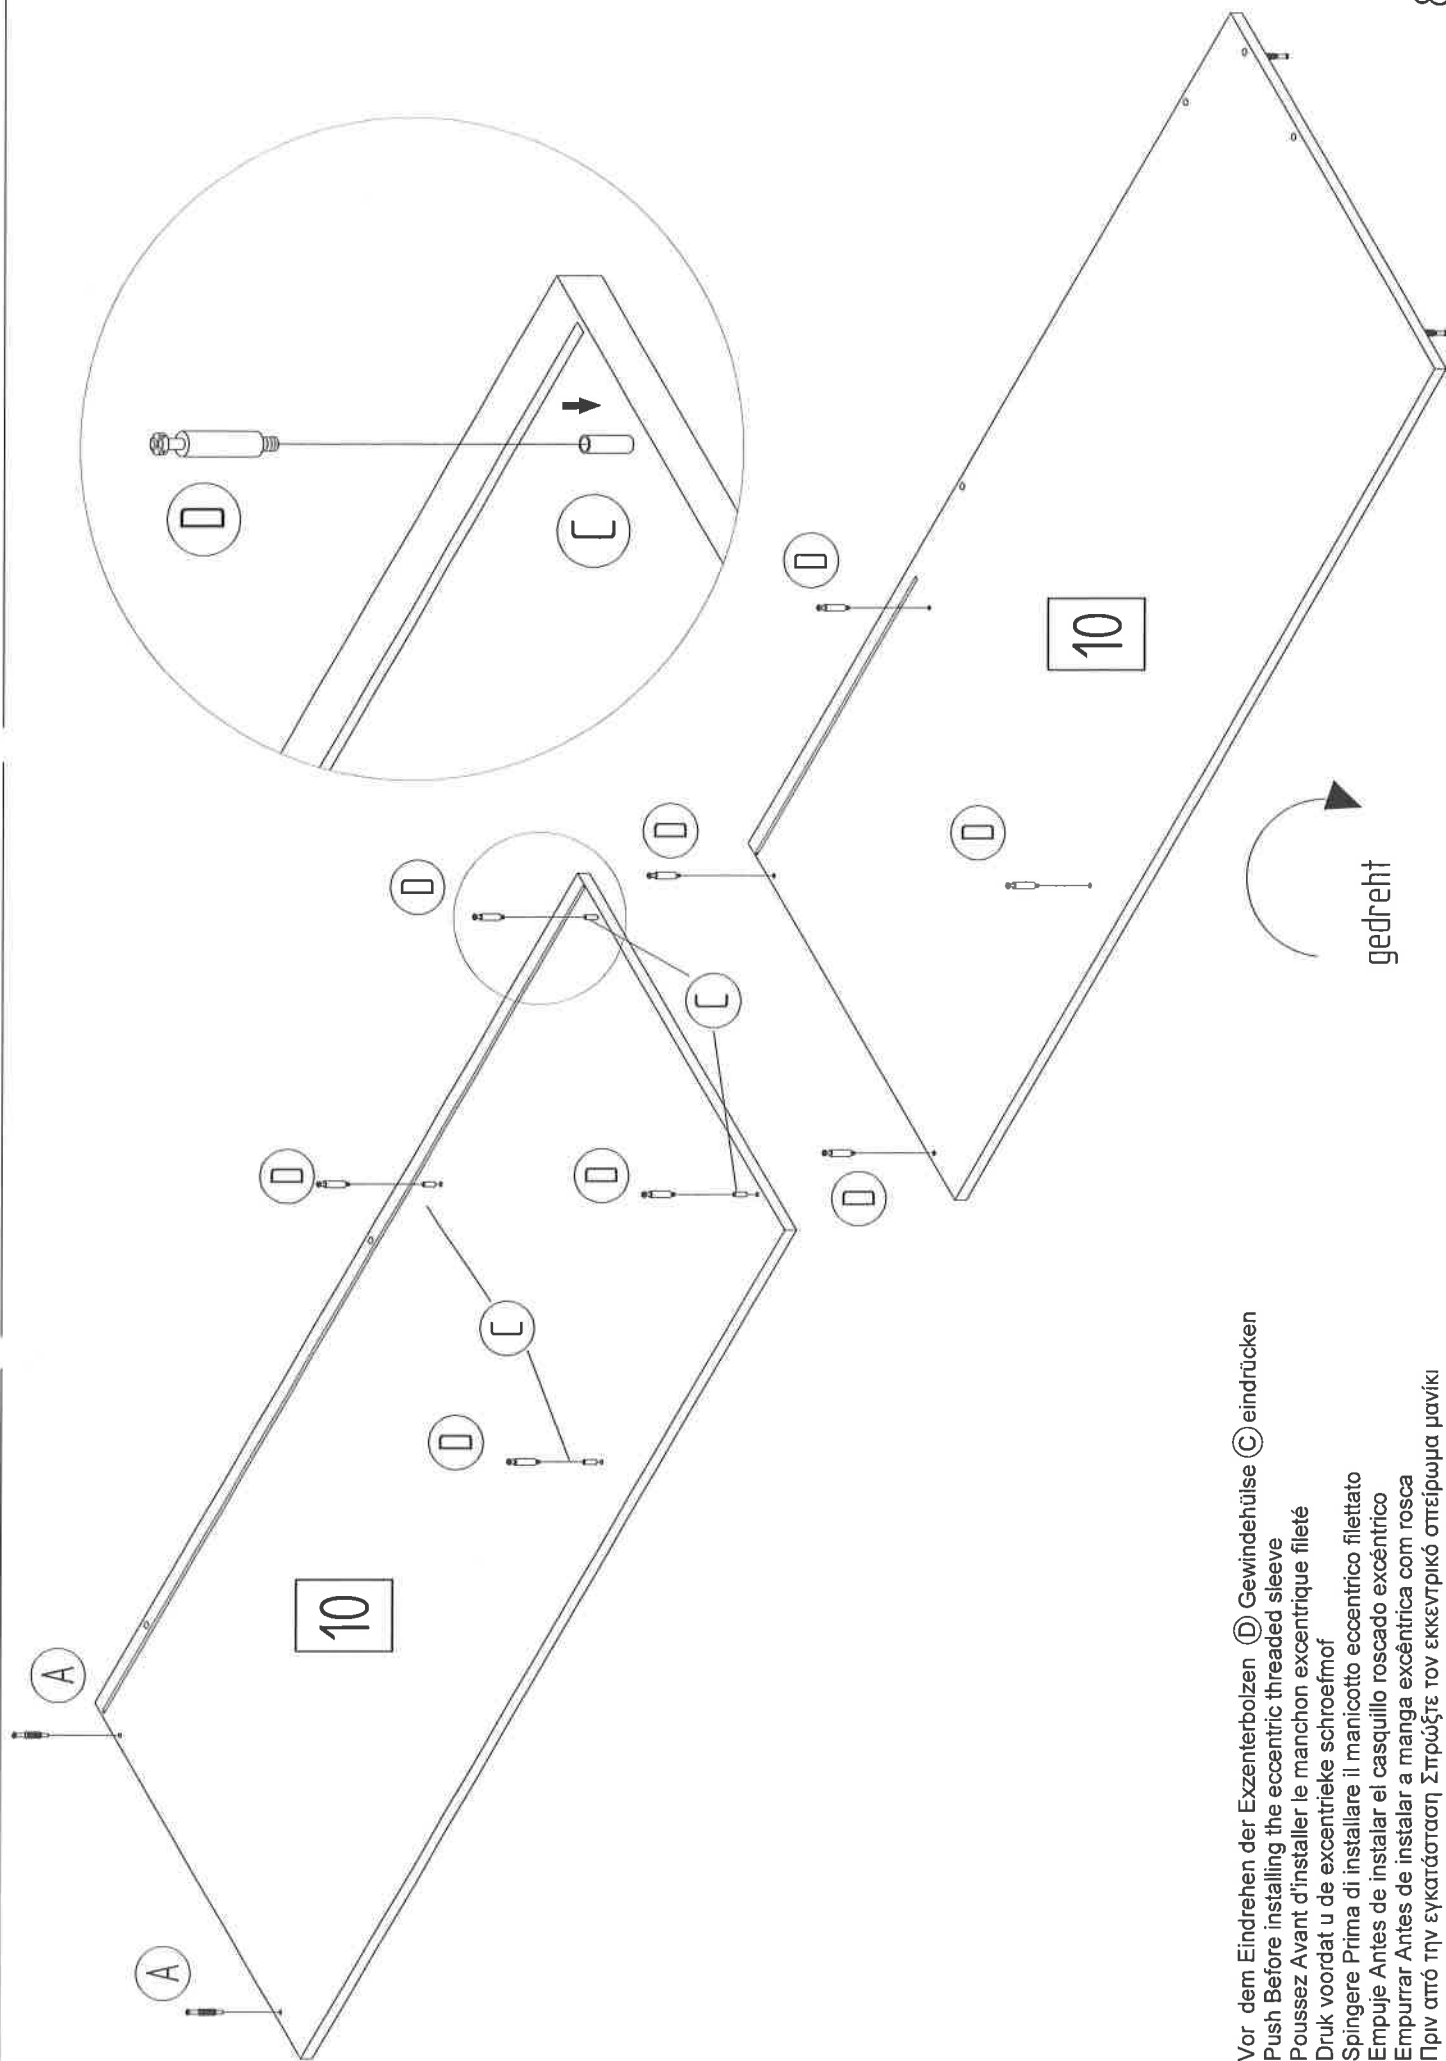





Vor dem Eindrehen der Exzenterbolzen Ⓓ Gewindehülse Ⓒ eindrücken
 Push Before installing the eccentric threaded sleeve
 Poussez Avant d'installer le manchon excentrique fileté
 Druk voordat u de excentriek schroefmoef
 Spingere Prima di installare il manicotto eccentrico filettato
 Empuje Antes de instalar el casquillo roscado excéntrico
 Empurrar Antes de instalar a manga excéntrica com rosca
 Πριν από την εγκατάσταση Σπρώξτε τον εκκεντρικό σπειρωμα μανίκι

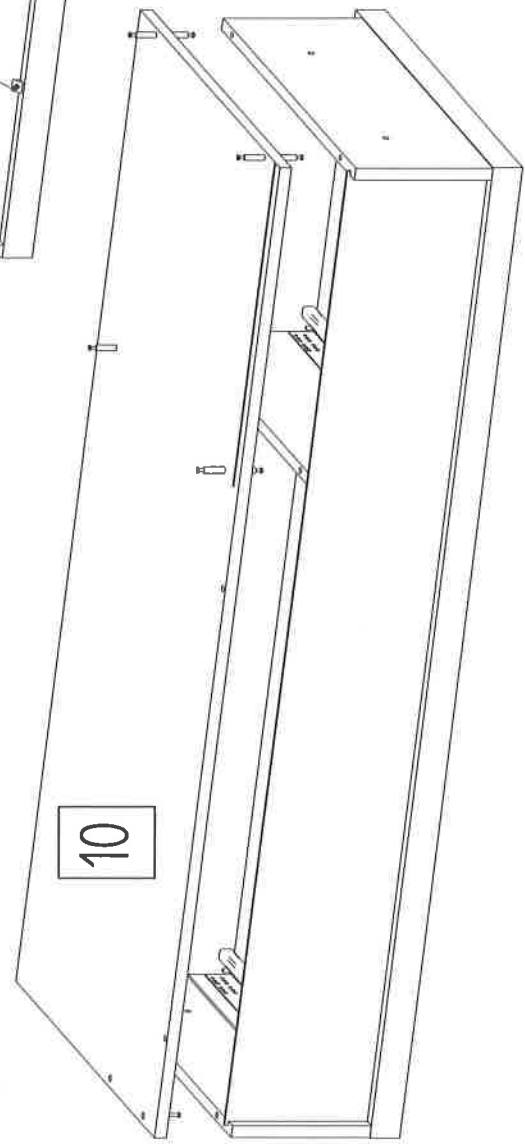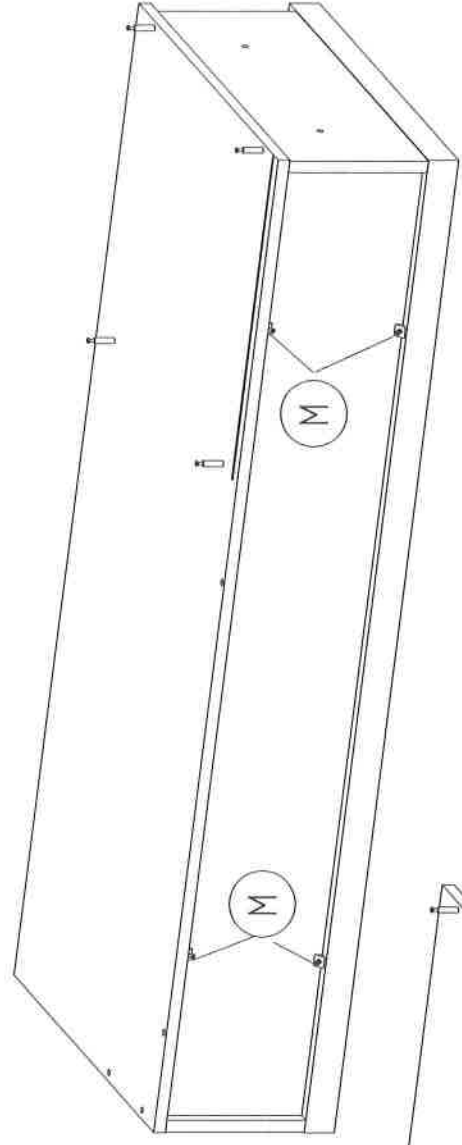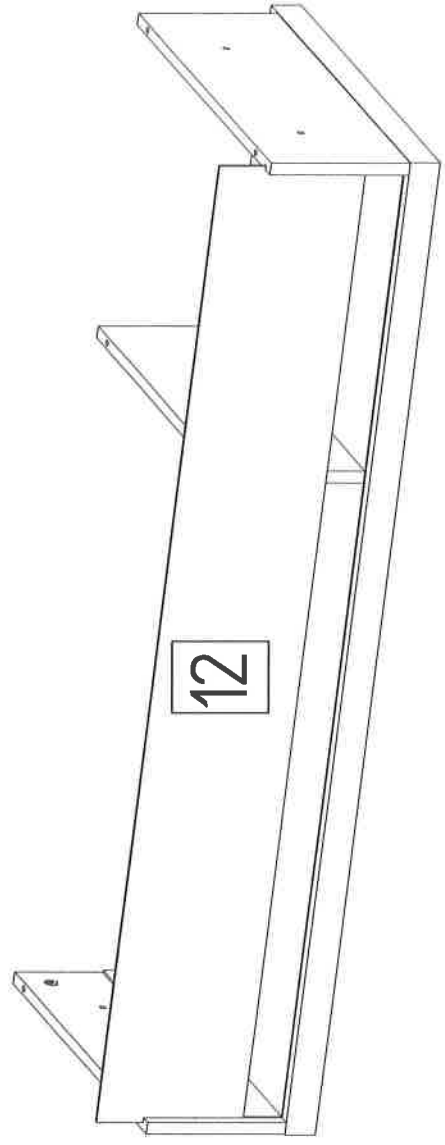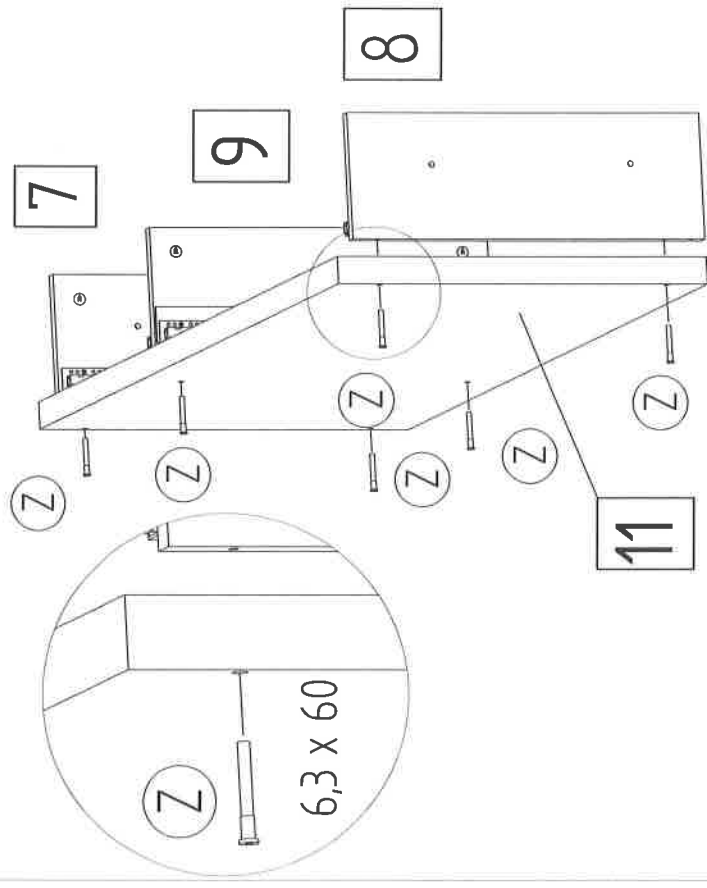


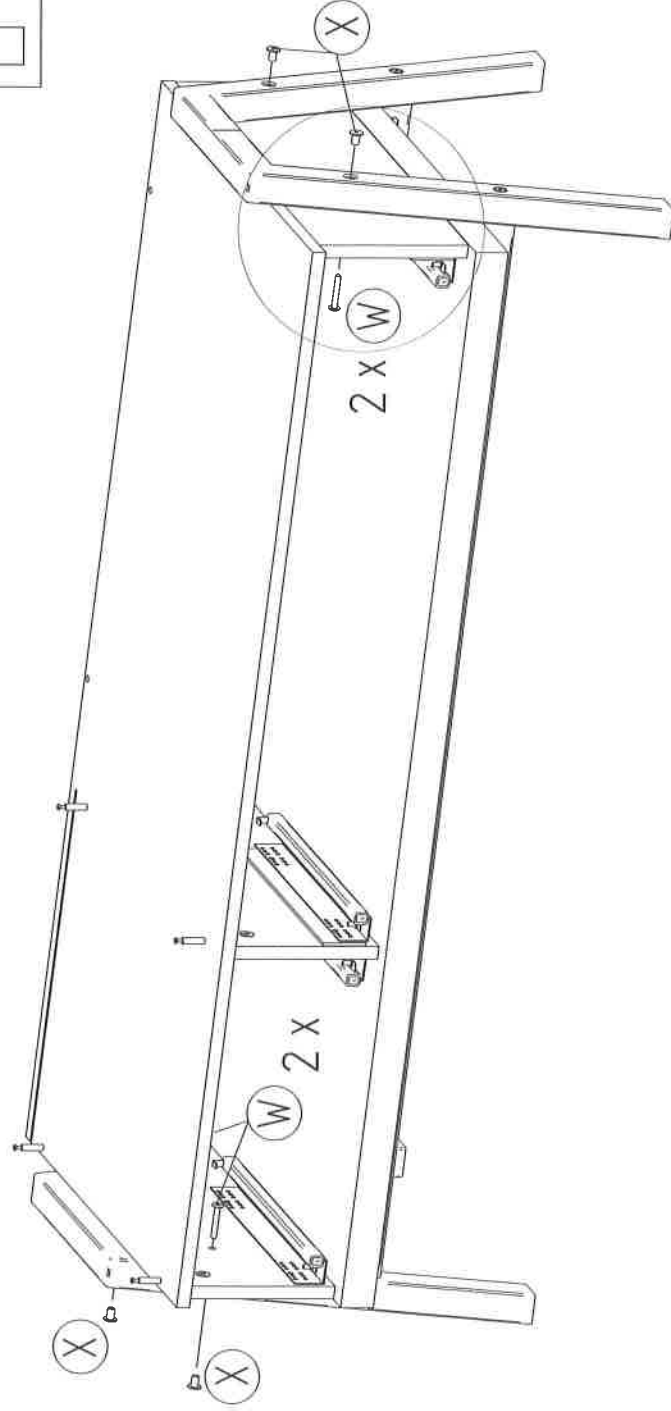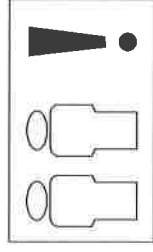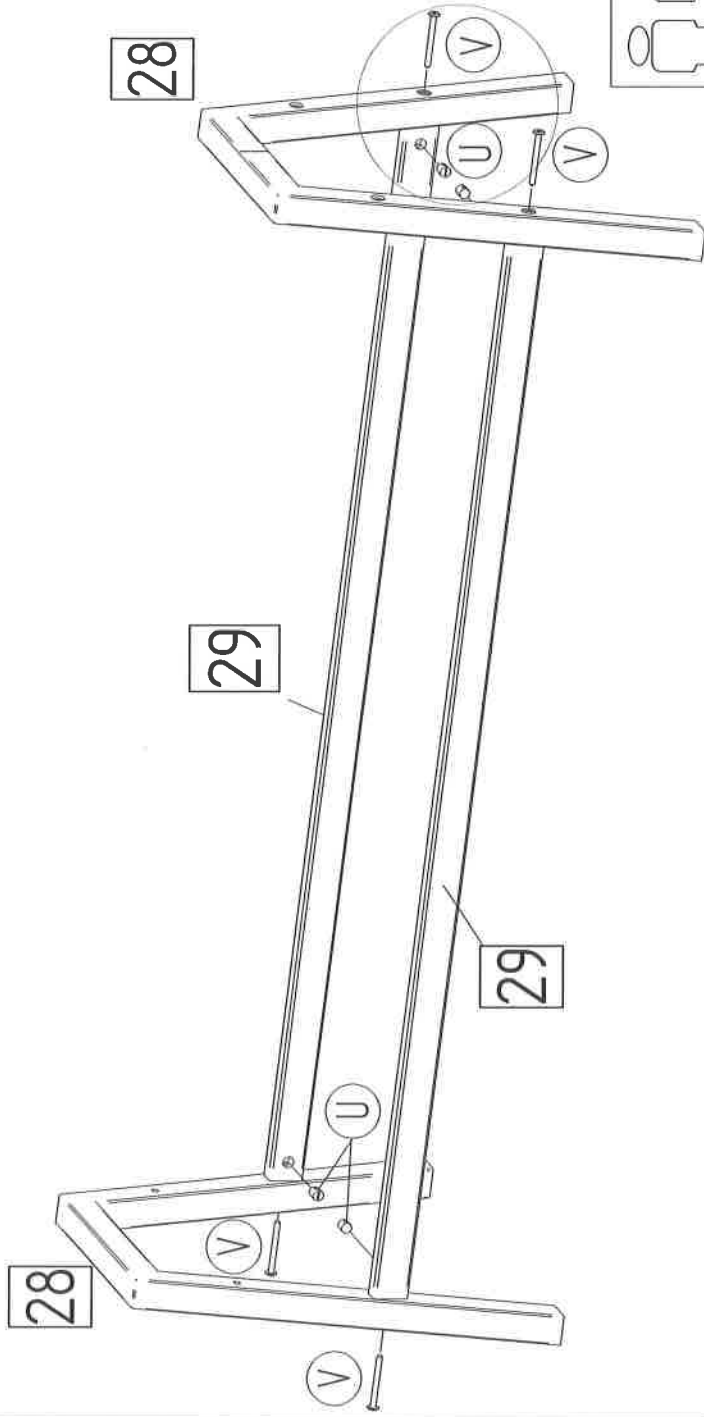


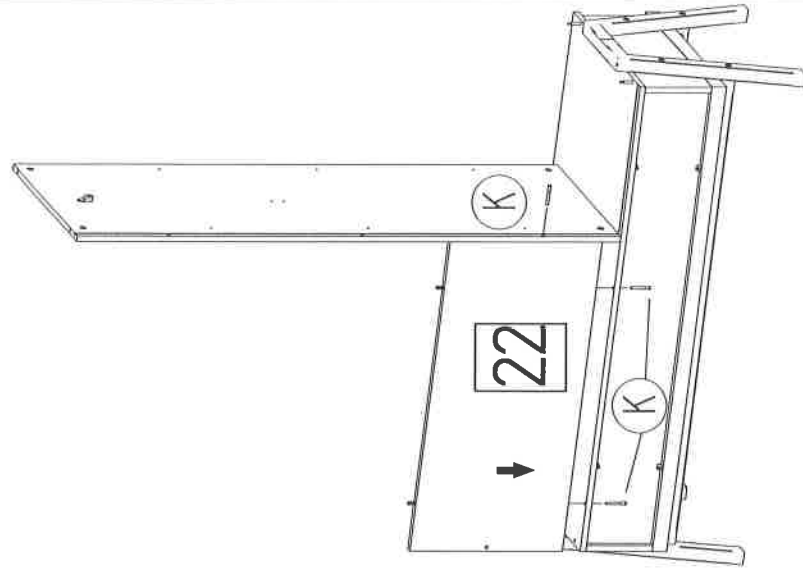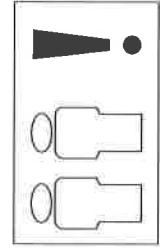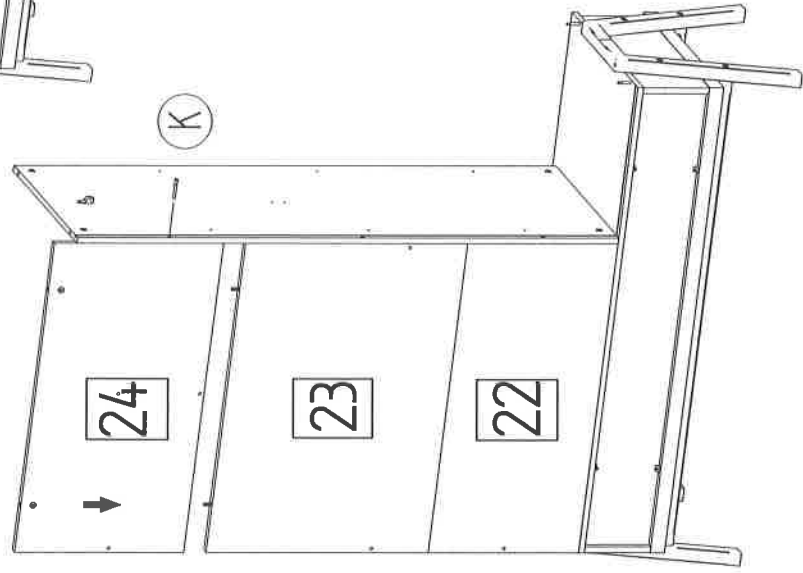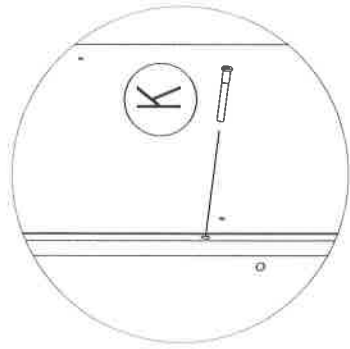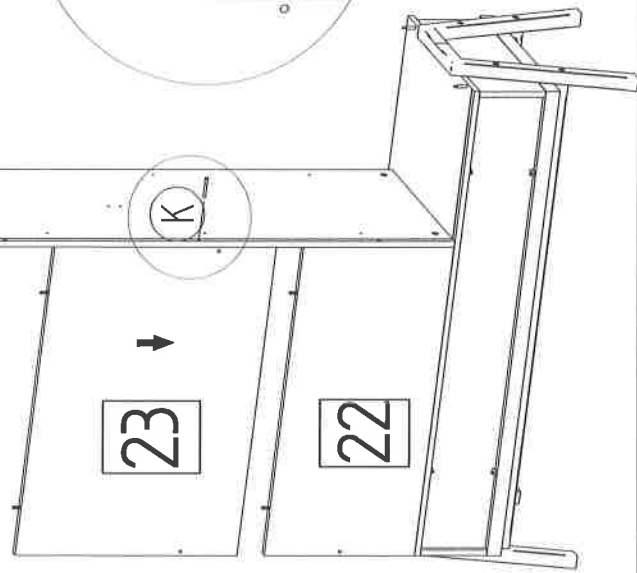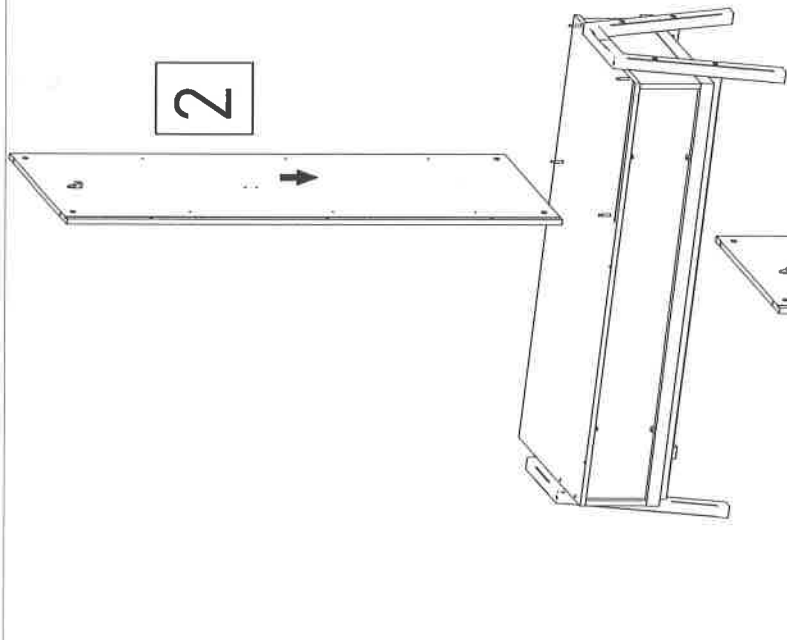

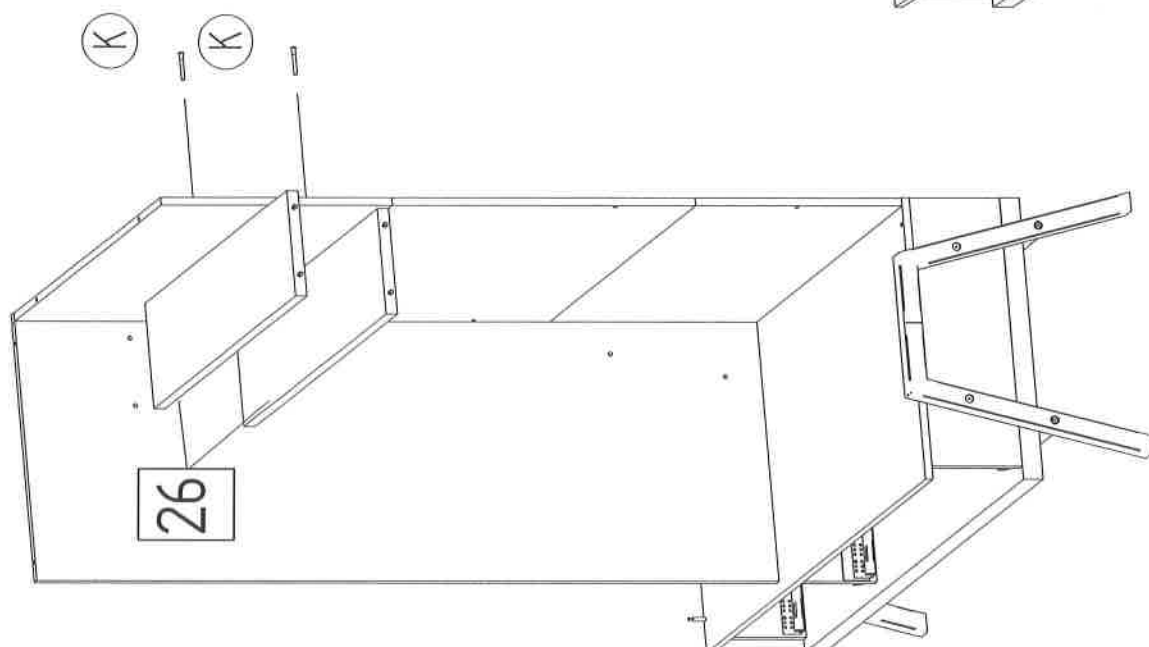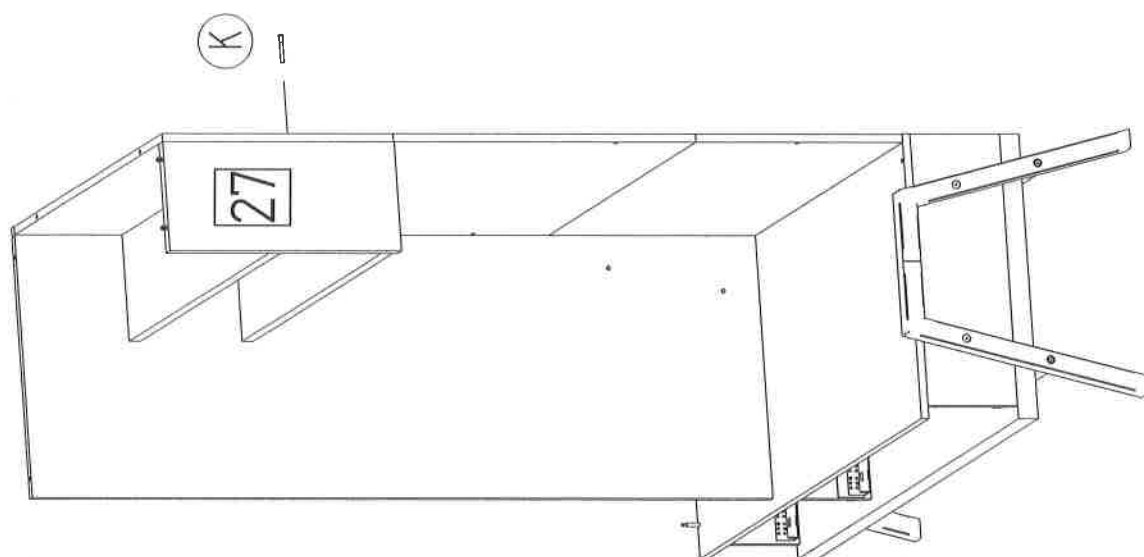
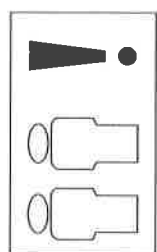
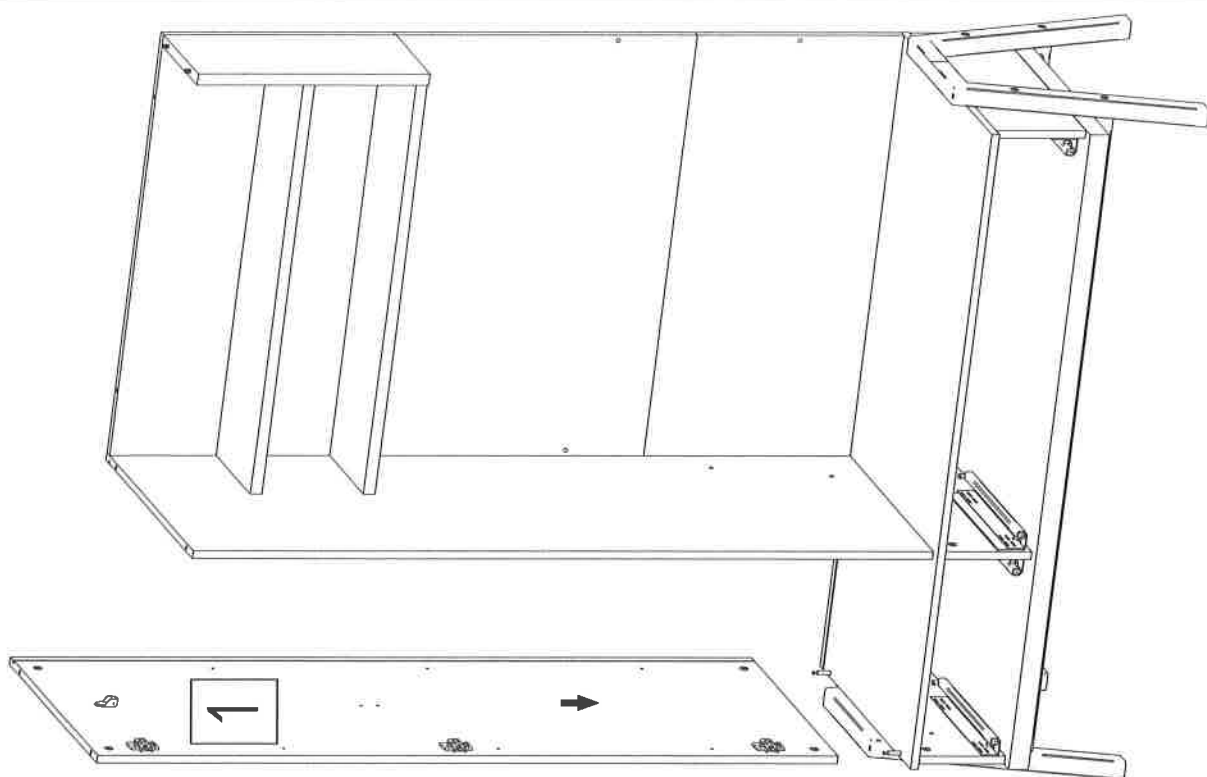


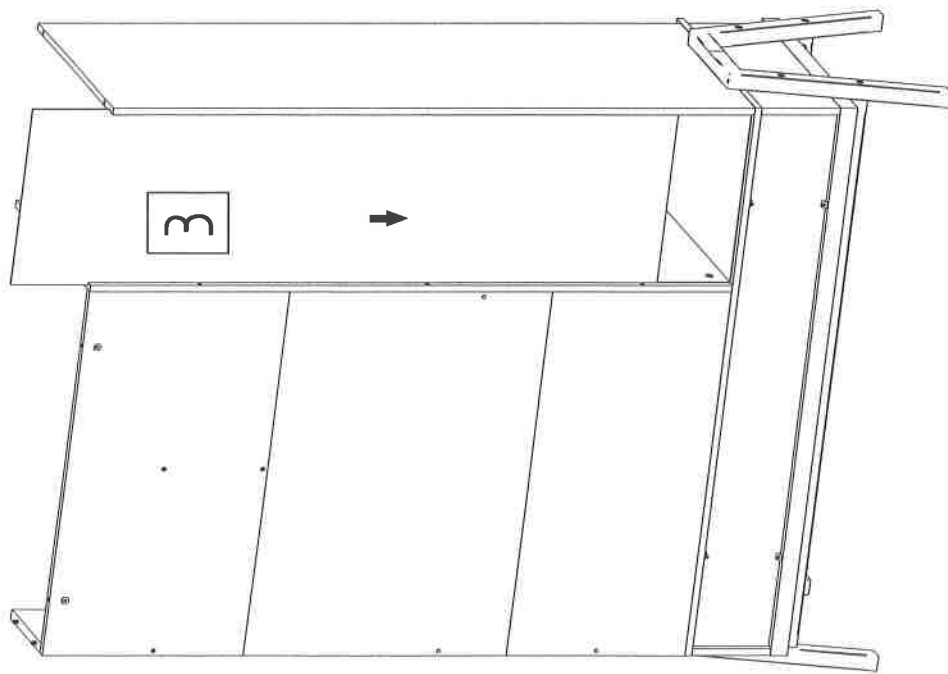
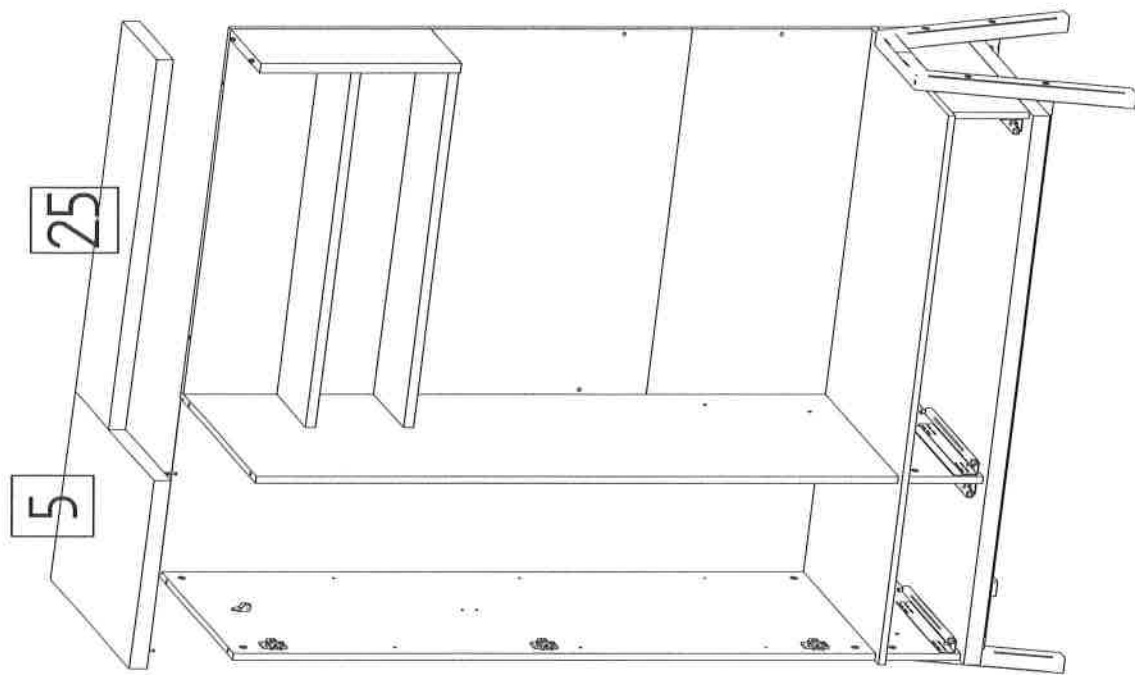
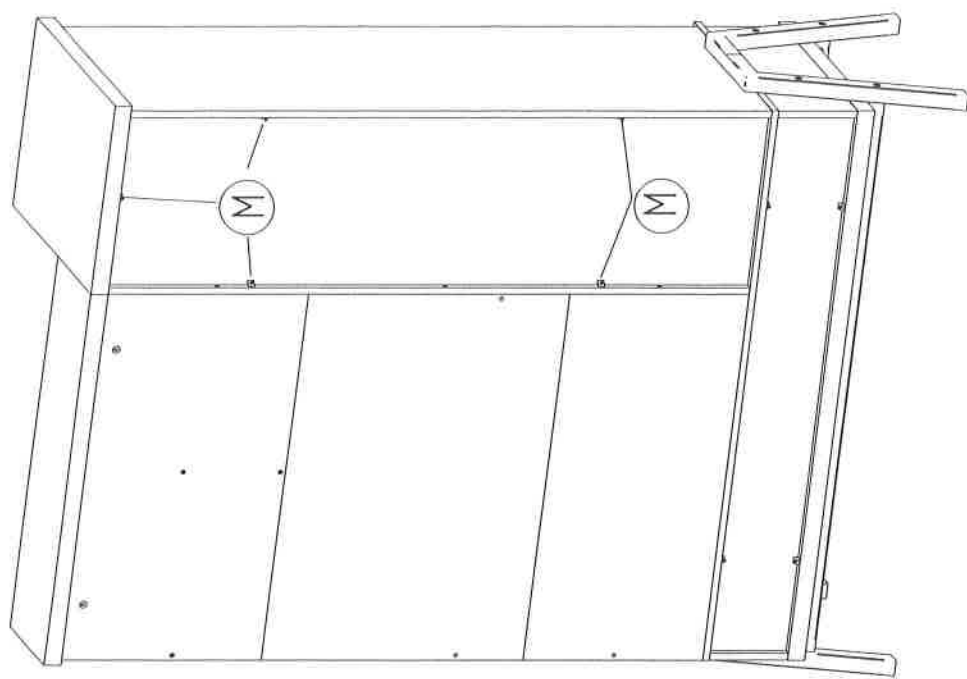


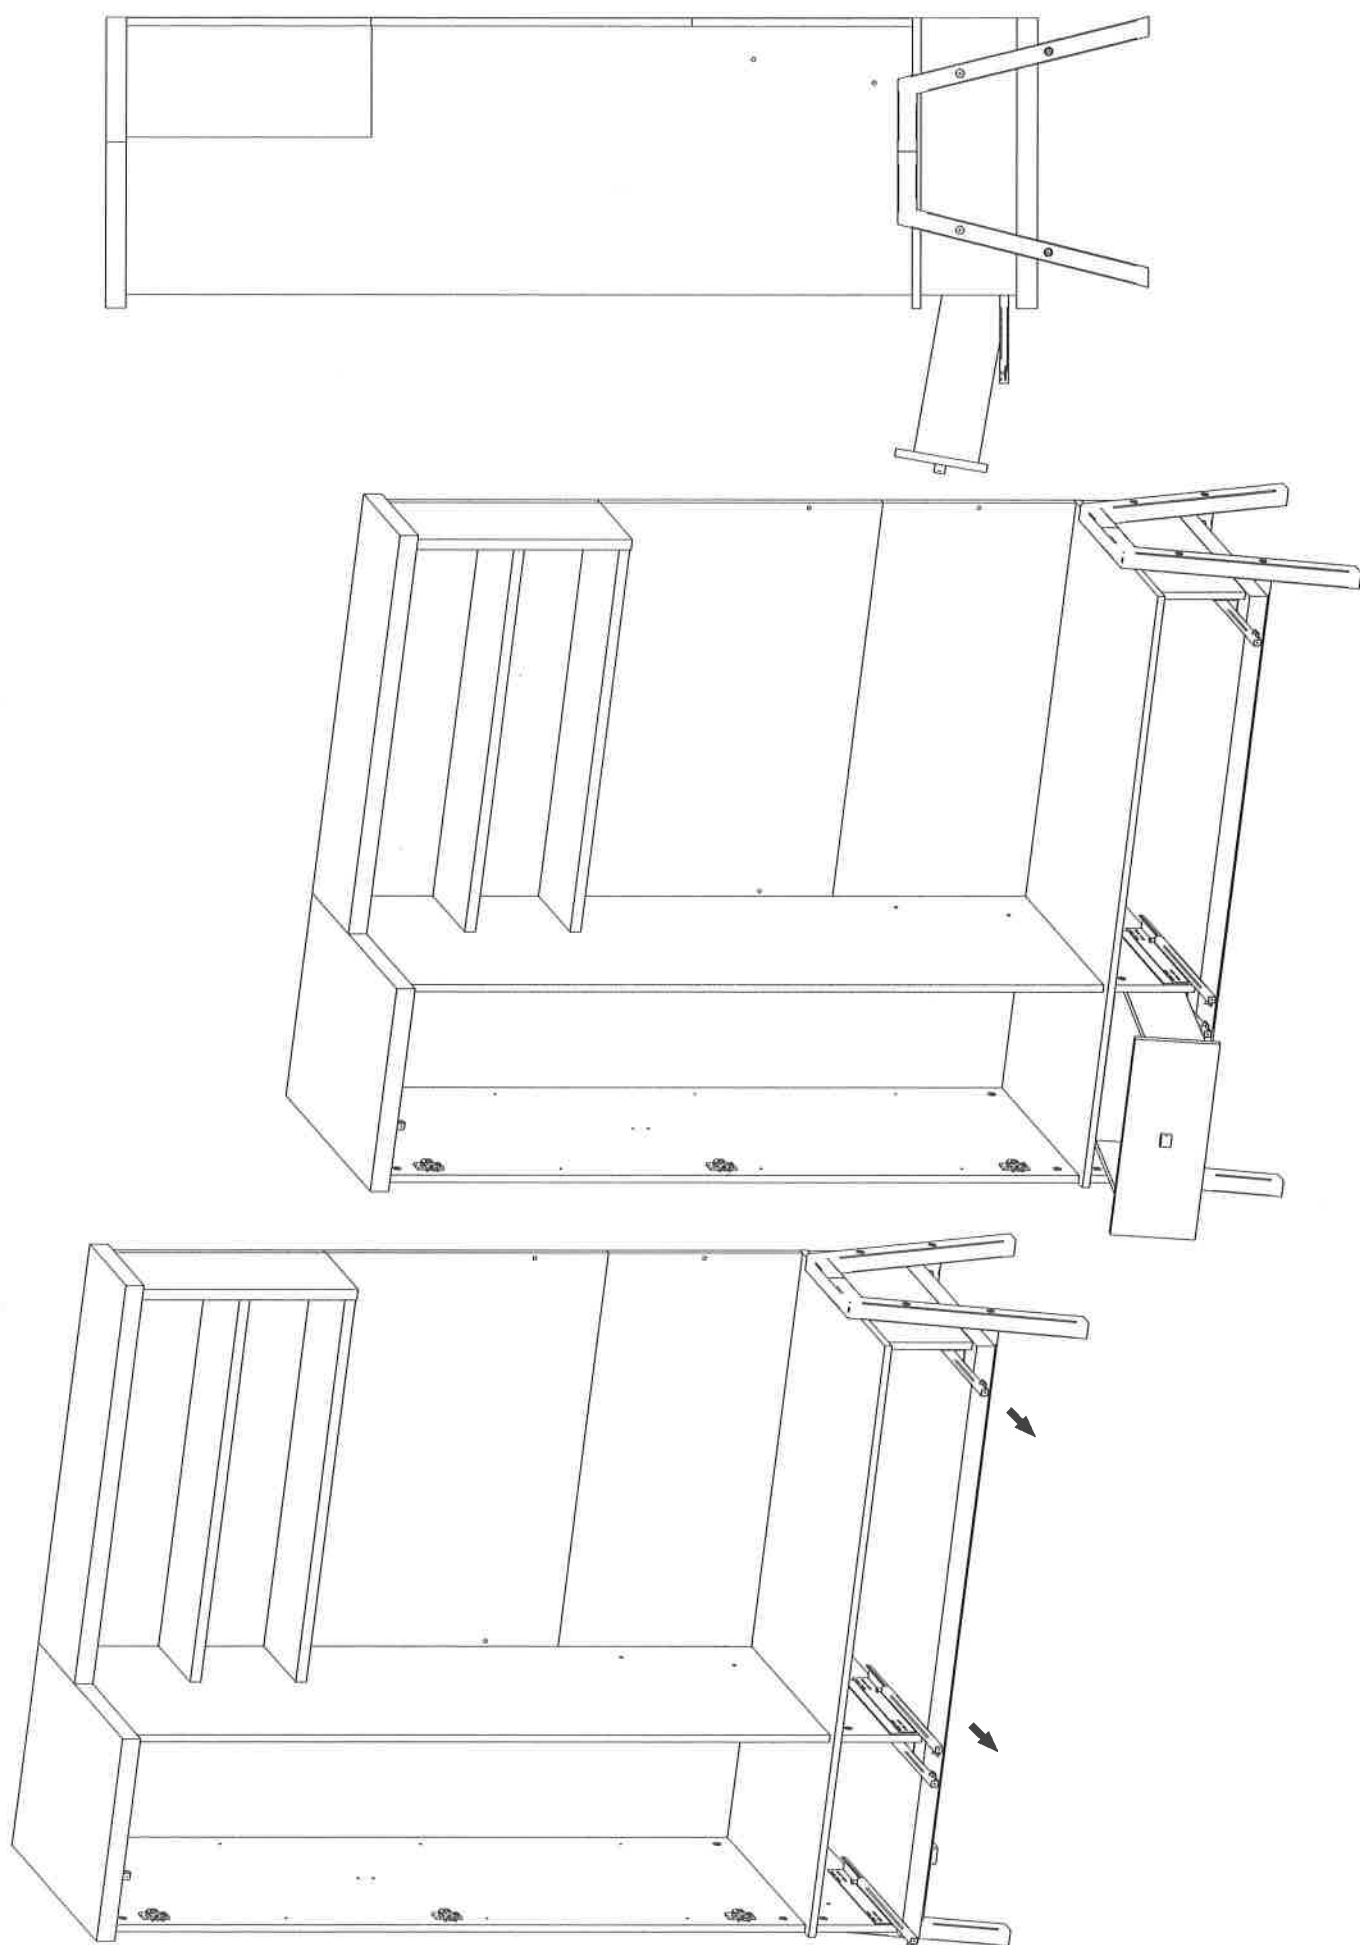

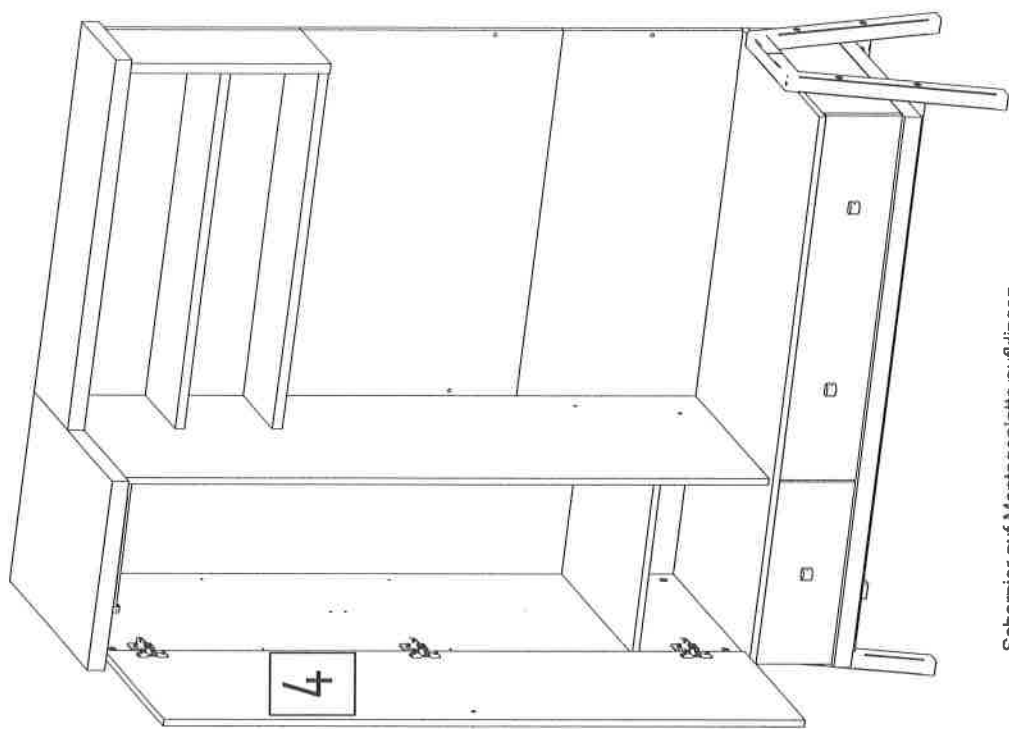




Scharnier auf Montageplatte aufklipsen

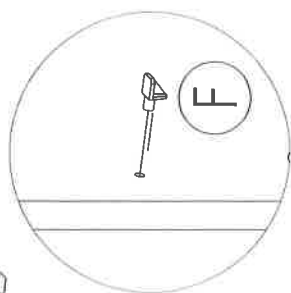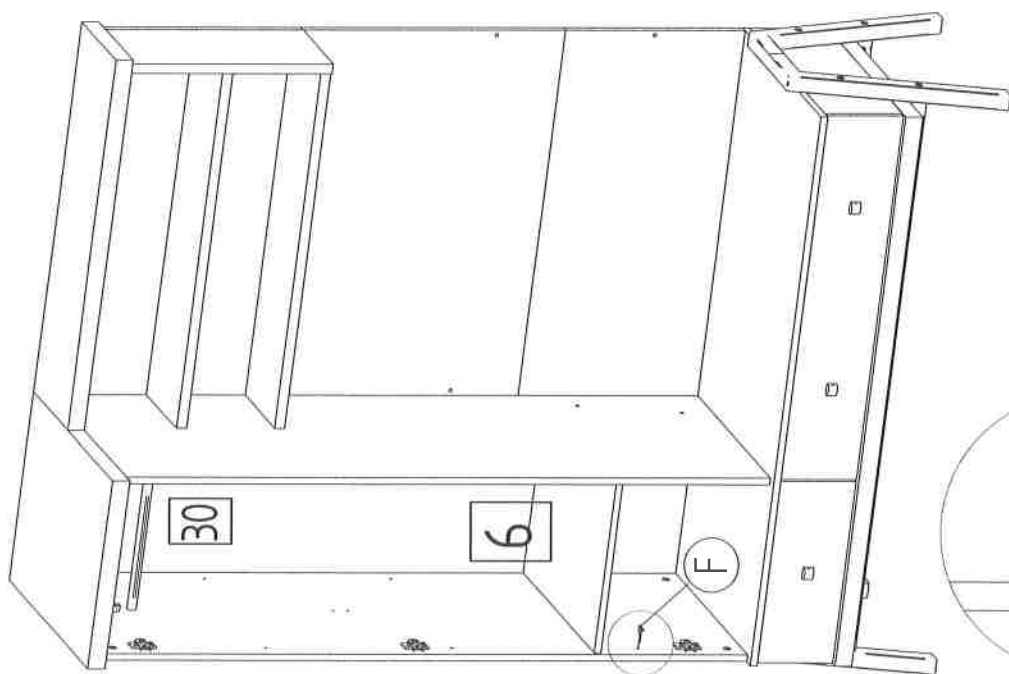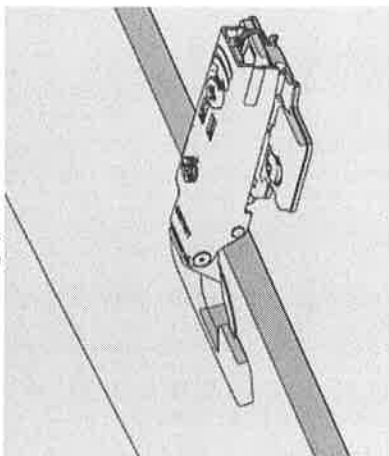

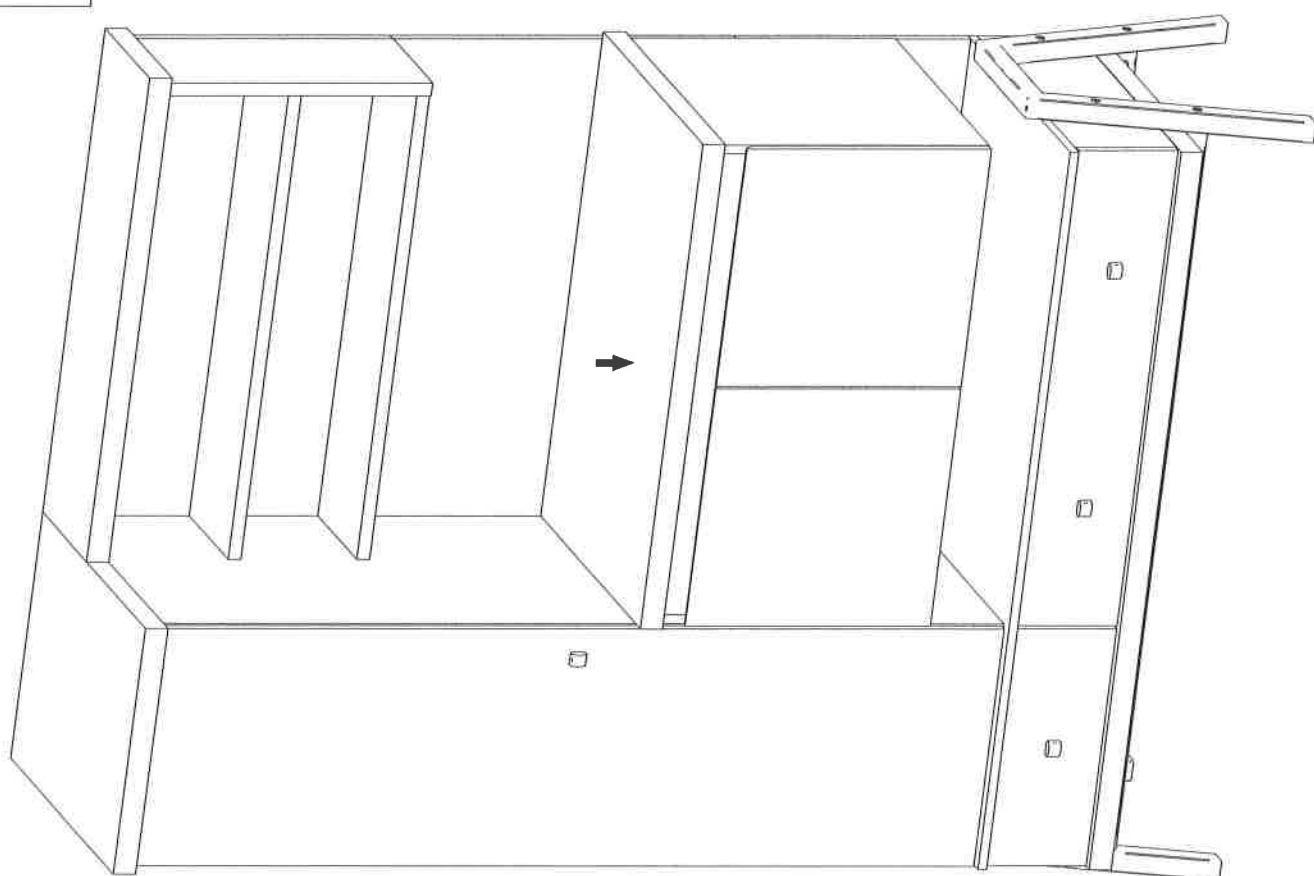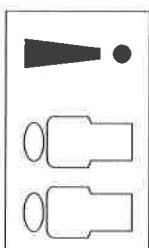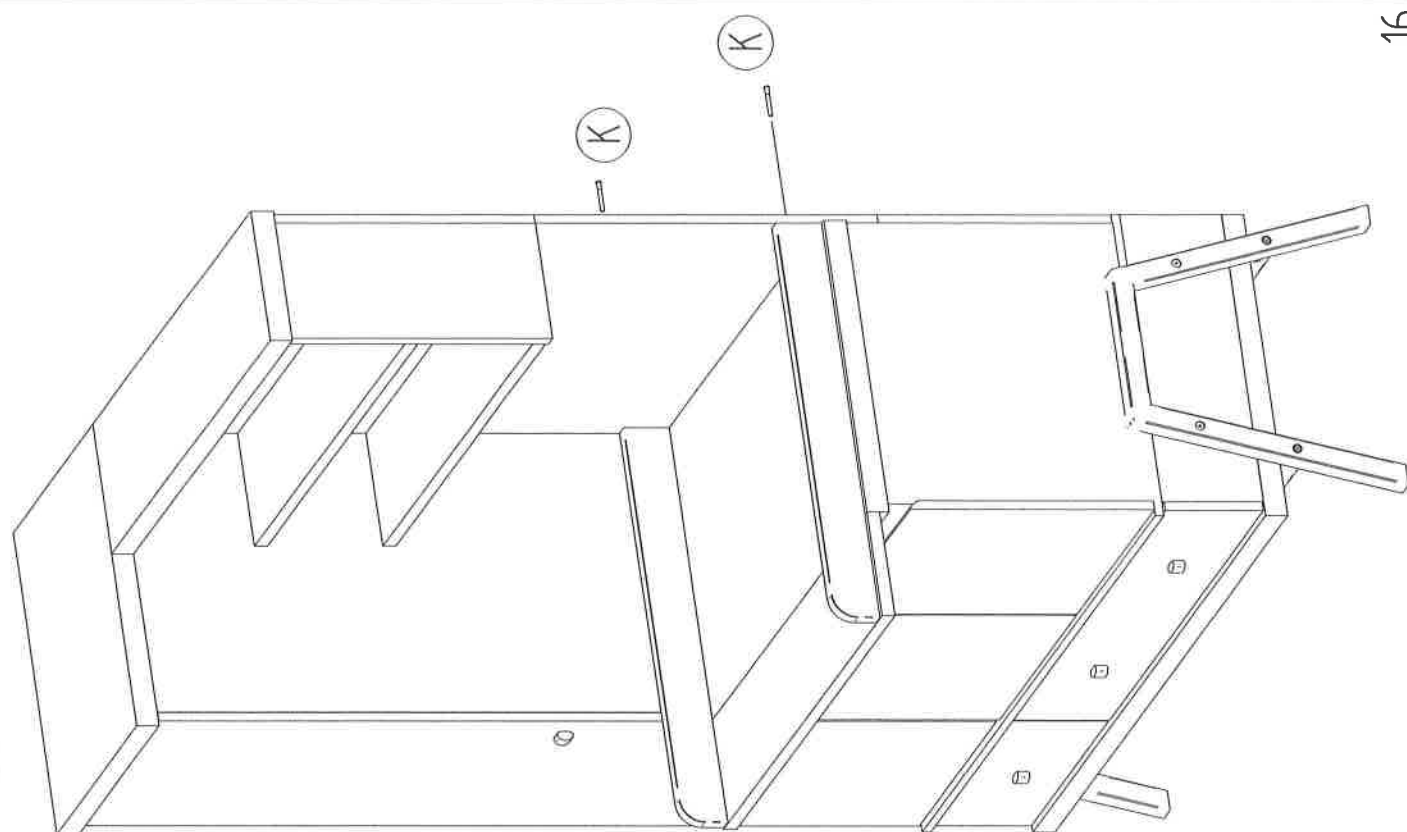

Inhalt - Contents - Contenu - Inhoud - contenido - conteúdo - περιεχόμενο












Holly 06 921
Wickelkomode



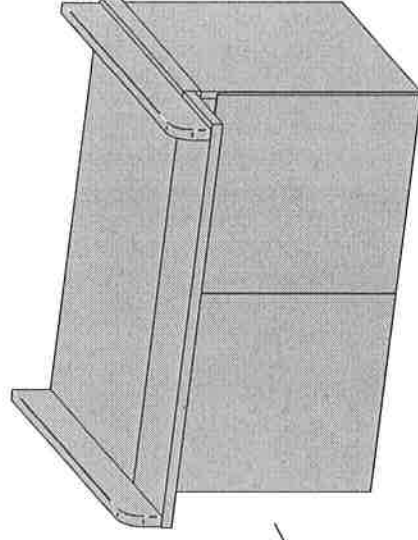
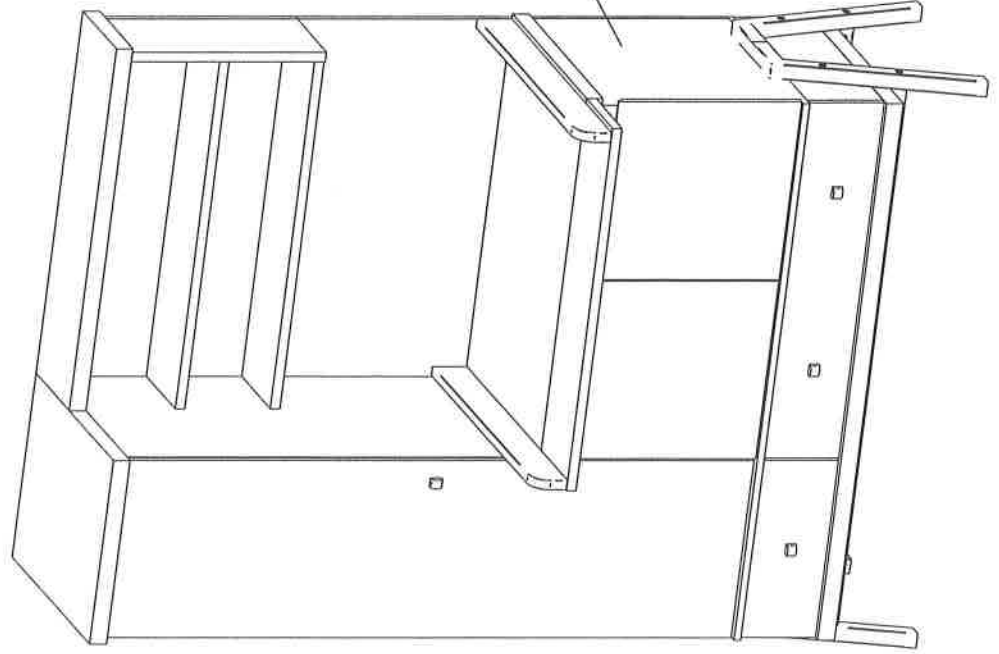
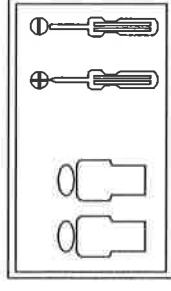





Beschlagbeutel:

A		8 x		
B		8 x		
T		3 x		
	$\phi 8$ 30 mm lang			
M		6 x		
G		4 x		
H		4 x		
I		3 x 16		
			6 x	




Teilleiste Wickelkomode

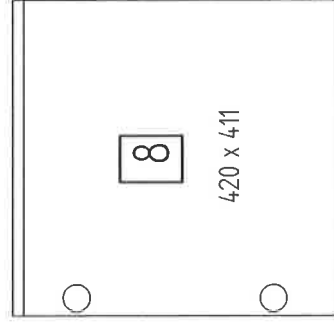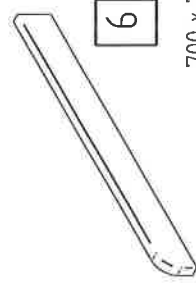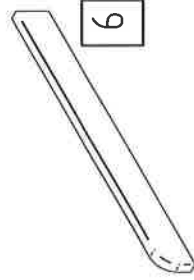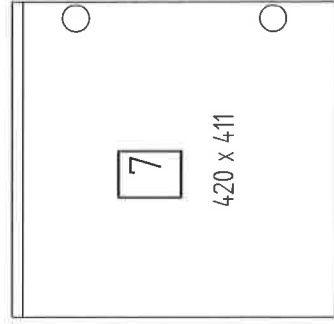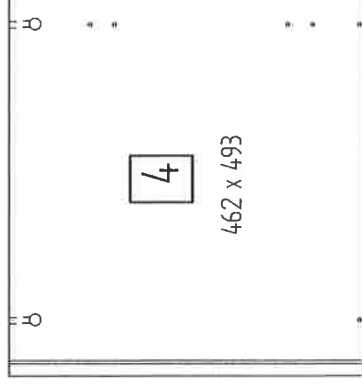
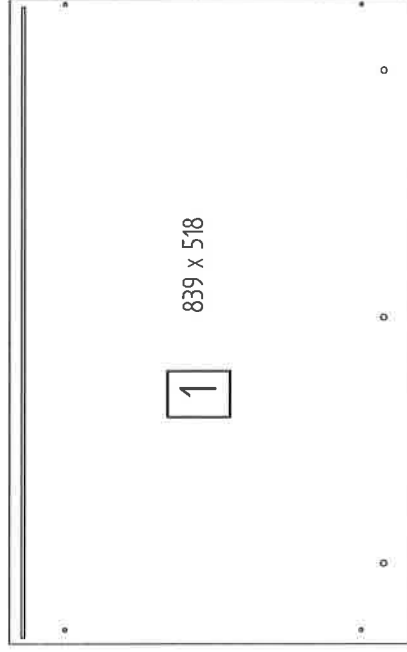
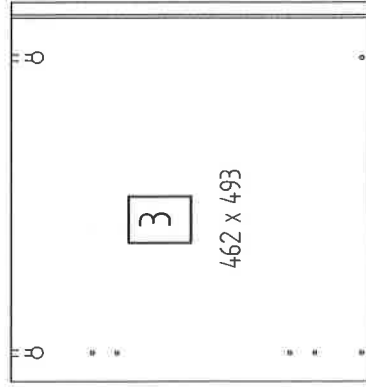
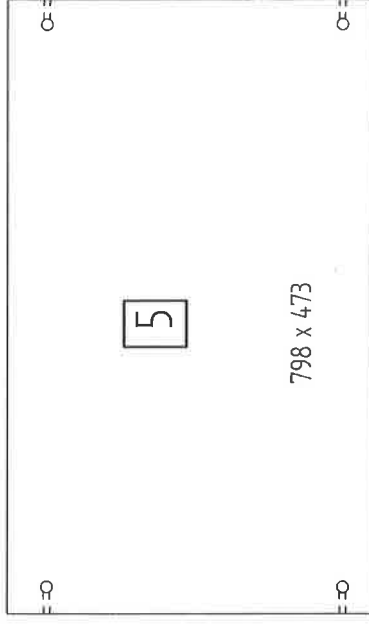
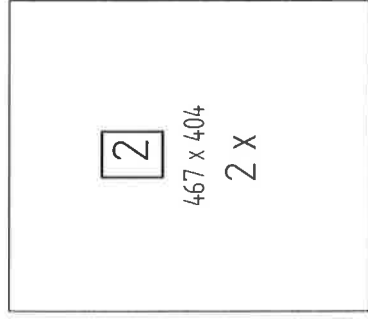
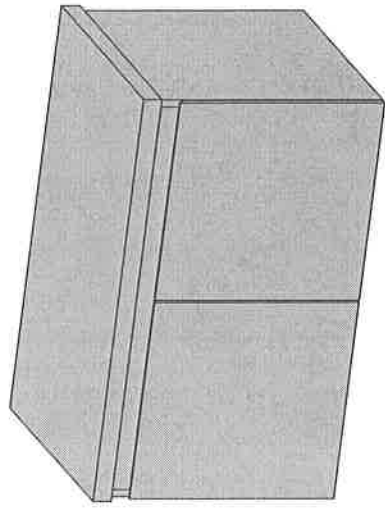


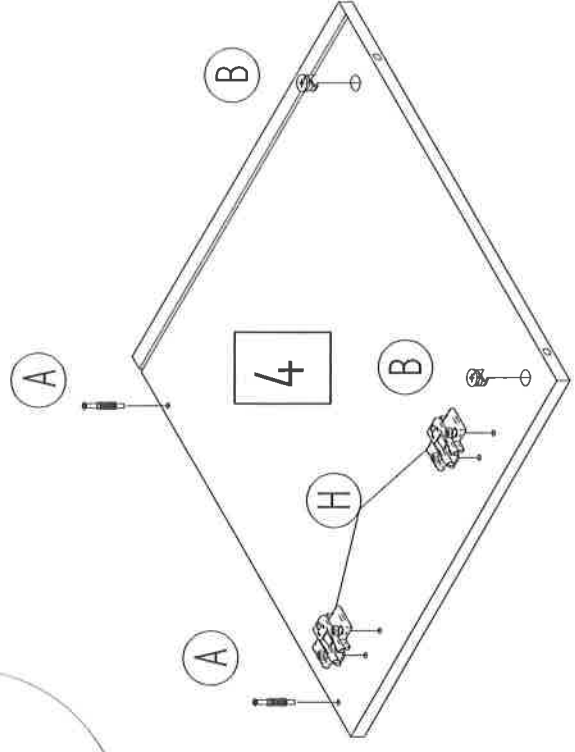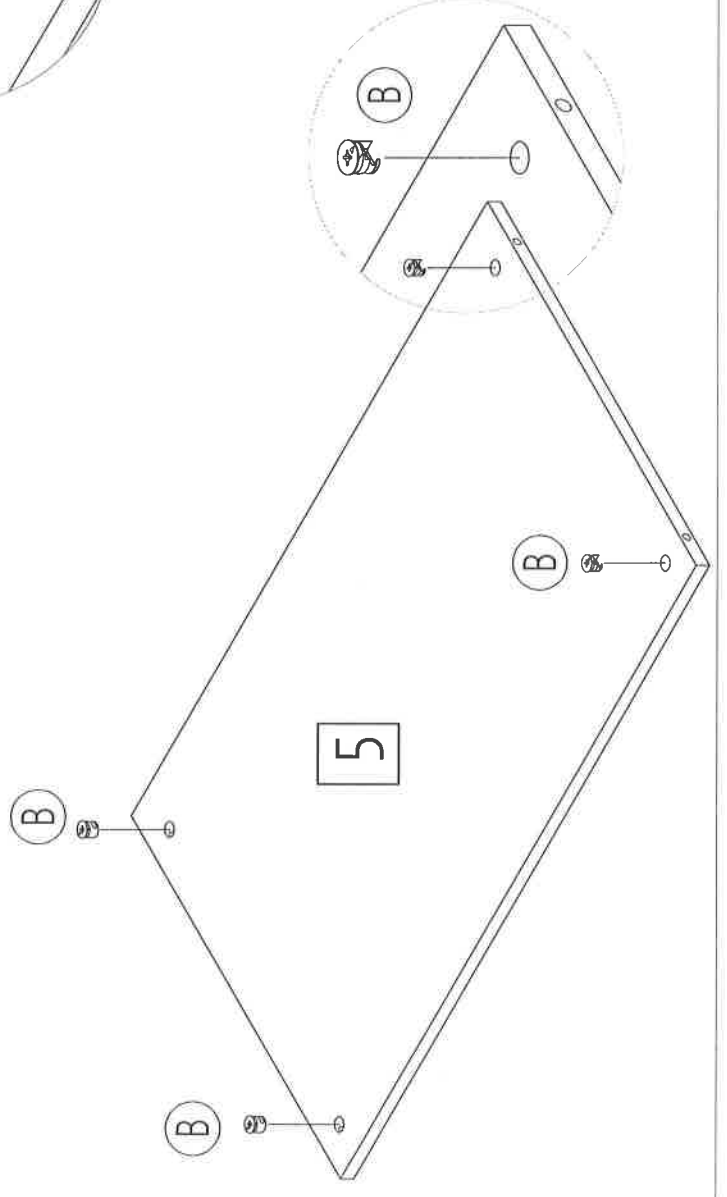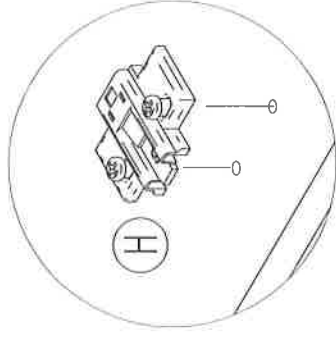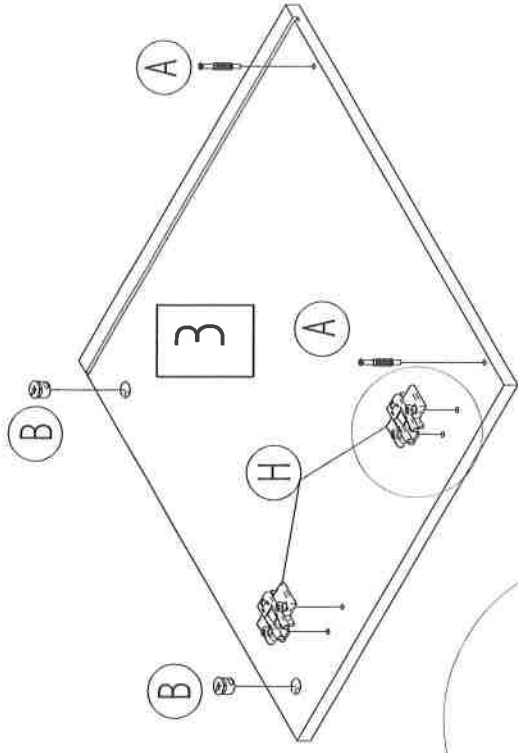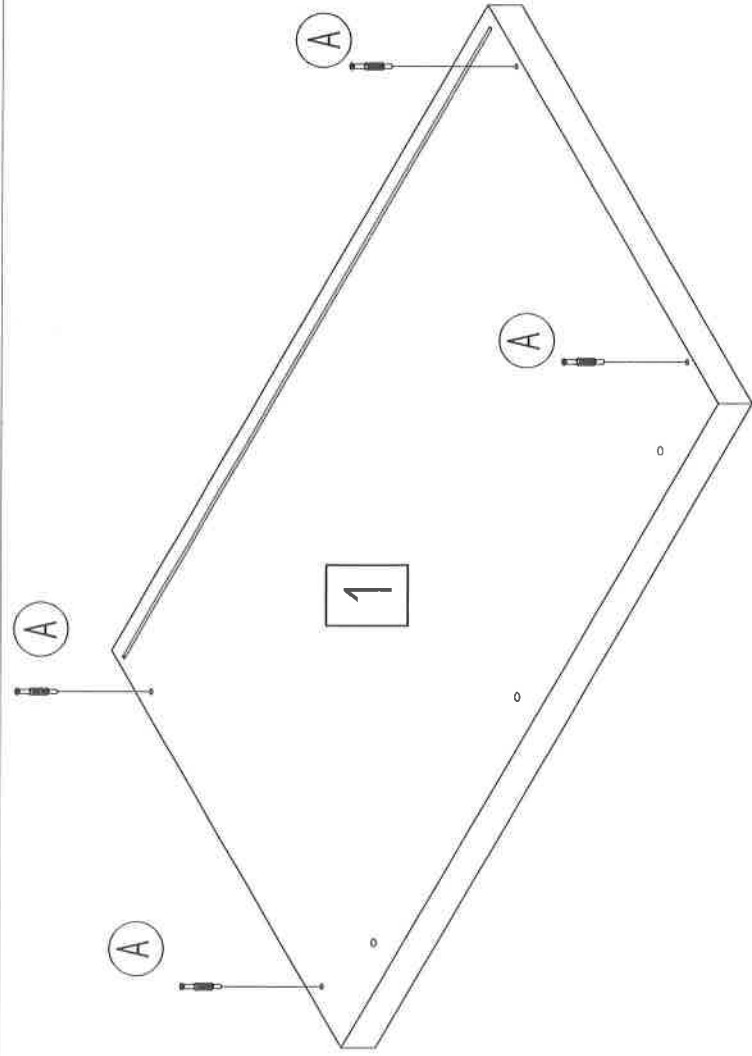

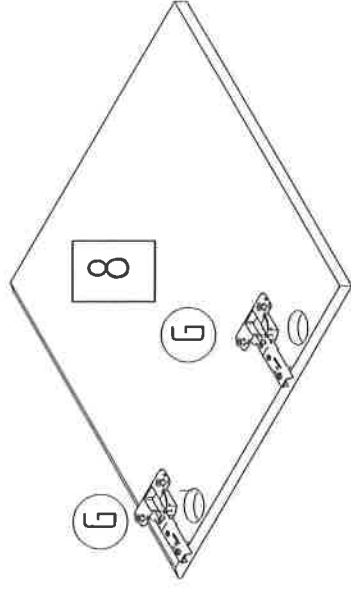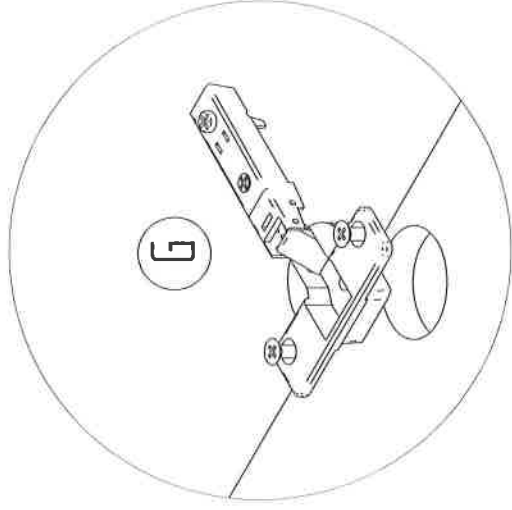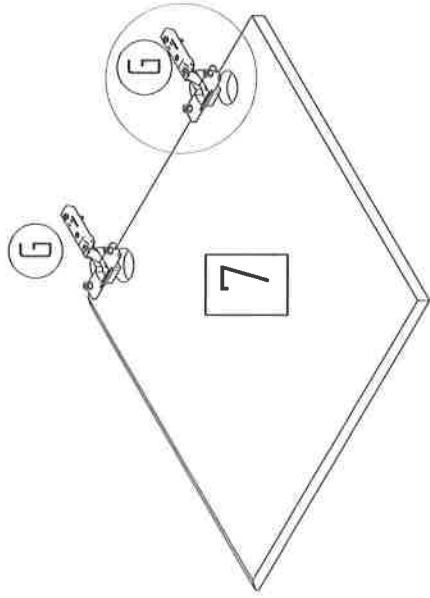


Zusammenbau:

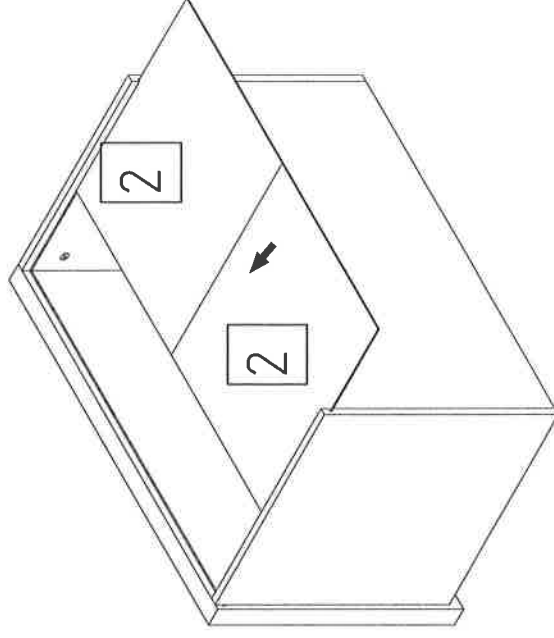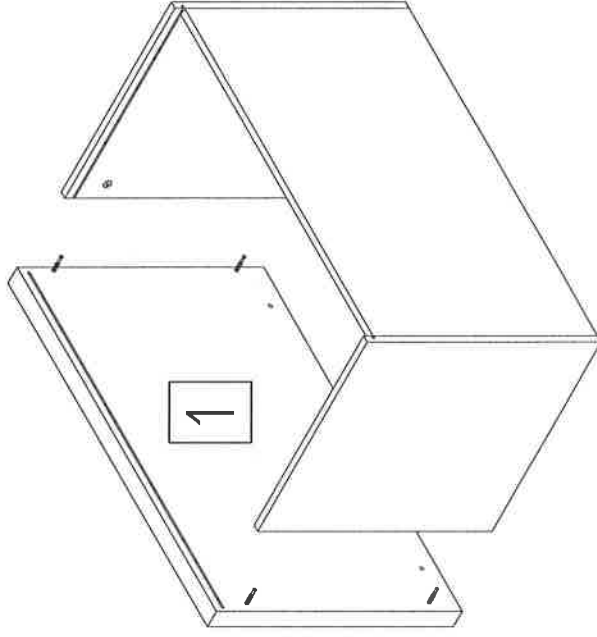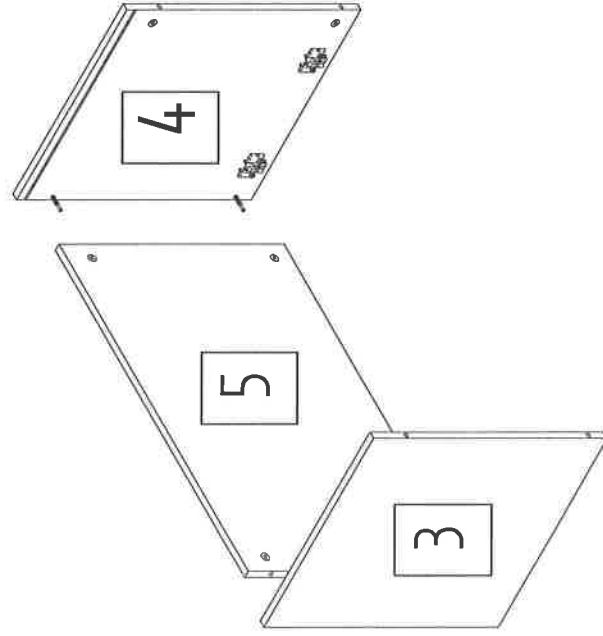

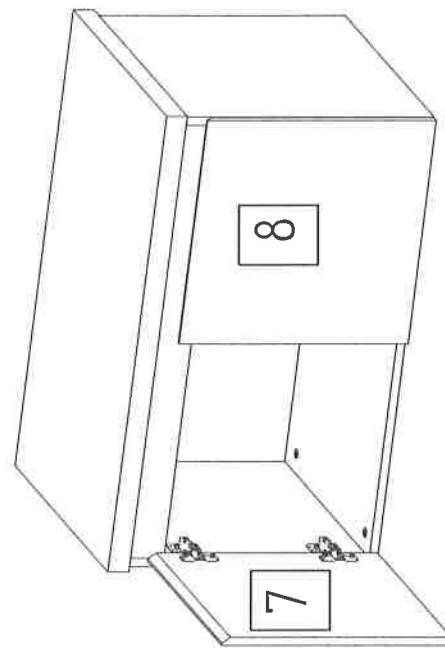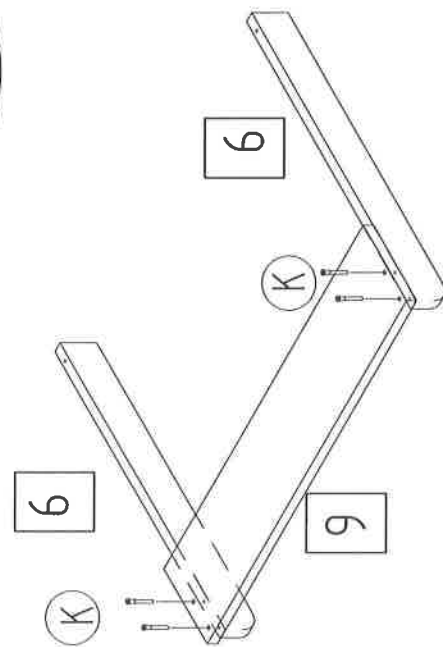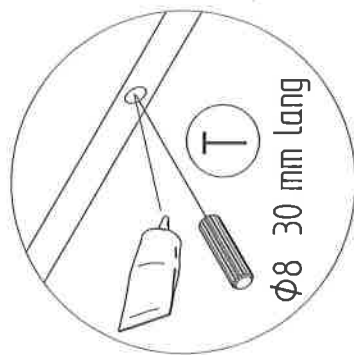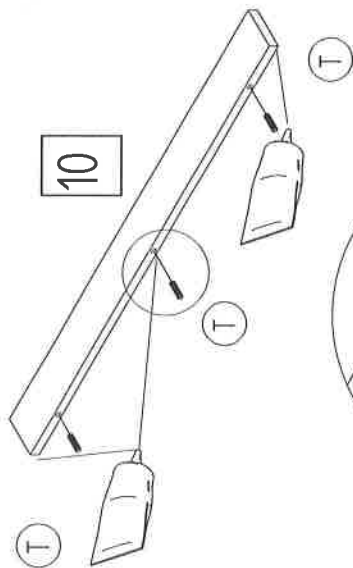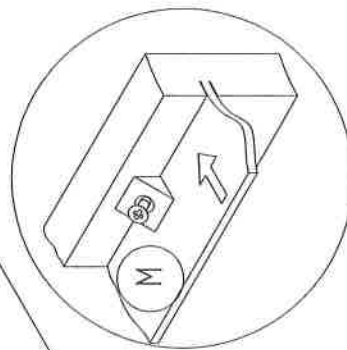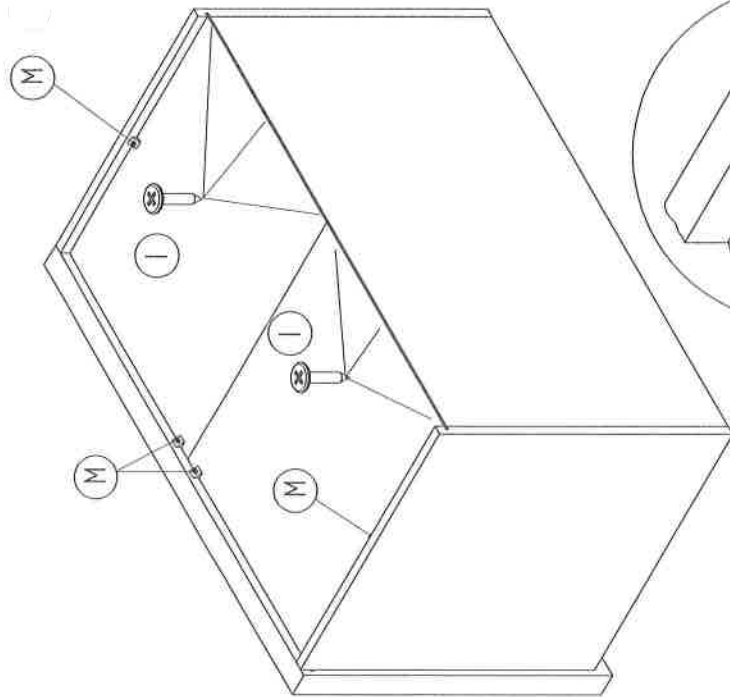

Blende einleimen

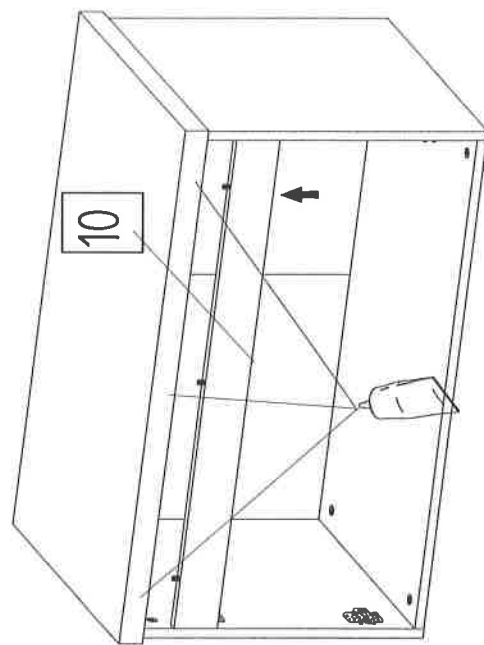

Scharnier auf Montageplatte aufklipsen

